


SAMSUNG

E-MANUAL

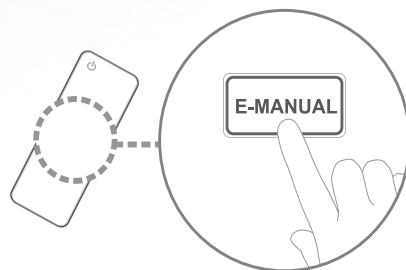

imagine the possibilities

Thank you for purchasing this Samsung product.
To receive more complete service, please register
your product at

www.samsung.com/register

Model _____ Serial No. _____

Contents

Channel Setting

- Using the INFO button (Now & Next guide) 1
- Using the Channel menu (Watch TV) 2
- Memorizing channels 16
- Other Features 19

Basic Features

- Picture Menu 21
- Sound Menu 38

Preference Features

- Network for LCD 550 series 47
- System Menu 74
- Support Menu 95

Advanced Features

- My Contents 104
- Anynet+(HDMI-CEC) 132
- AllShare™ for LCD 550 series 145

Other Information


- Troubleshooting 150
- Anti-theft Kensington Lock 169
- License 171

❏ Using the INFO button (Now & Next guide)

The display identifies the current channel and the status of certain audio-video settings.

The Now & Next guide shows daily TV program information for each channel according to the broadcasting time.

- Scroll ◀, ▶ to view information for a desired program while watching the current channel.

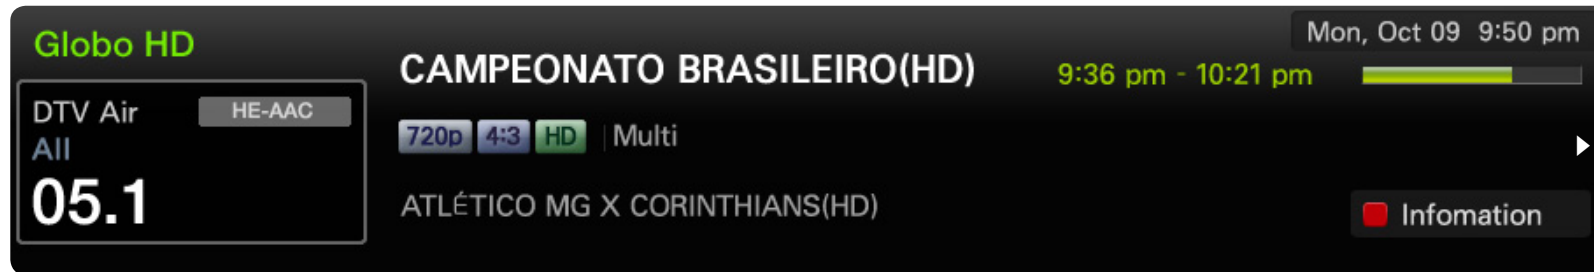

* It may differ depending on the country.

❑ Using Channel menu (Watch TV)

👆 MENU  → Support → Contents Home → ENTER 

Press the **CONTENT** button to select **Watch TV**, then select the desired menu.
Each screen will be displayed.

■ Guide

The EPG (Electronic Program Guide) information is provided by broadcasters. Using program schedules provided by broadcasters, you can specify programs you want to watch in advance so that the channel automatically changes to the selected program channel at the specified time. Program entries may appear blank or out of date depending on a channel status.



Using Guide

Guide

Wed, 6 Oct 10:54 pm



DTV Air 08.1 Rede TV!HD
Home and Away
9:48 pm - 12:05 am

ATLÉTICO MG X CORINTHIANS(HD)

Channel View - All

Today		12:00 am	12:30 am	1:00 am	1:30 am
05.1	Globo HD	JORNAL DA GLOBAL	Tine Team		
05.1	Globo HD	No Information			
07.1	TVN DIGITAL HD	No Information			
08.1	Rede TV!HD	Home and...	No Information		
09.1	QVC	QVC Selection			
▼ 11.1	R4DTT	No Information			

A Schedule Mgr

B -2 Hours

C +2 Hours

D Exit

Information

Page

Schedule

1

2

3

4

5

6

7

* It may differ depending on the country.

- ① **A** Red (**Schedule Mgr**): Moves to the **Schedule List** in **Schedule Manager**.
- ② **B** Green (**-2 Hours**): Viewing the list of programs to be broadcasted before 2 hours.
- ③ **C** Yellow (**+2 Hours**): Viewing the list of programs to be broadcasted after 2 hours.
- ④ **D** Blue (**EXIT**): Exits the guide.
- ⑤ **i** (**Information**): Displays details of the selected program.
- ⑥ **↕** (**Page**): Move to previous or next page.
- ⑦ **⏮** (**Watch / Schedule**)
 - When selecting the current program, you can watch the selected program.
 - When selecting the future program, you can reserve to watch the selected program. To cancel the schedule, press the **ENTER** **⏮** button again and select **Cancel Schedules**.

■ Schedule Manager

Cancel or set the **Timer Viewing** to display the channel you want at the intended time.

Using Timer Viewing

You can set a desired channel to be displayed automatically at the intended time. Set the current time first to use this function.

1. Press the **ENTER**  button on the **Schedule Manager** screen.
2. Press the **ENTER**  button to add manual booking.
3. Press the / / /  button to set the **Antenna**, **Channel**, **Repeat**, **Date**, **Start Time**.
 - **Antenna**: Select the desired broadcasting signal.
 - **Channel**: Select the desired channel.

- **Repeat:** Select **Once**, **Manual**, **Sat~Sun**, **Mon~Fri** or **Everyday** to set at your convenience. If you select **Manual**, you can set the day you want.

 The (✓) mark indicates the day is selected.

- **Date:** You can set desired date.

 It is available when you select **Once** in **Repeat**.

- **Start Time:** You can set start time you want.

 If you want to edit or cancel the schedule, select the reserved schedule on the **Schedule List**, and select the **Edit** or **Cancel Schedules**.

Channel List

You can view channel information, **Added Channels** or **Favorites 1-5**.

When you press the **CH LIST** button on the remote control, **Channel List** screen will be displayed at once.

- **Added Channels**: Shows all added channels.
- **Favorites 1-5**: Shows all favorite channels.

Favorites 1-5 will be displayed when you set **Add to Favorites**.

If you want to view Favorites channels you added, press the **CH LIST** button and use ◀▶ (**CH Mode**) button to move **Favorites 1-5**.



* It may differ depending on the country.



Using the color buttons with the **Channel List**.

- **A** Red (**Antenna**): Switches to **Air** or **Cable**.
- **C** Yellow (**Program View / Channel View**):
Displays the program when digital channel is selected. Returns to the channel view.
- **◀▶** (**CH Mode / Channel**): Move to the **Favorites 1-5** when **Add to Favorites** is set.
 When you press the **C** (**Program View**) button, you can move to other channels using **◀▶** (**Channel**) button.
-  (**Watch / Information**): Watches the channel you select. / Displays details of the selected program.
- **⬅➡** (**Page**): Move to next or previous page.

Channel Status Display Icons

Icon	Operations
	An analog channel.
	A reserved program.
	A locked channel.



How to use Timer Viewing in Channel List (digital channels only)

When you set the **Timer Viewing** in **Channel List**, you can only set the program in **Program View**.

1. Press the **CH LIST** button, then select a desired digital channel.
 2. Press the  (**Program View**) button.
 3. Press the **▲** / **▼** buttons to select the desired program, then press the **ENTER**  or **INFO** button.
 4. Select **Timer Viewing**, then press the **ENTER**  button when done.
-  If you want to cancel **Timer Viewing**, follow steps 1 through 3. Select **Cancel Schedules**.

Channel Manager

Add or edit the Favorites channel and set the channels to **Delete**, **Deselect All** or **Select All**. You can edit the channel name only for analog channels.

- (📡) **Added Ch.:** Shows all added channels.
- (📡) **All Channels:** Shows all currently available channels.
- (★) **Favorites 1-5:** Shows Favorites channels.

✎ Using the color buttons with the **Channel Manager**.

- **A** Red (**Antenna**): Switches to **Air** or **Cable**.
- **D** Blue (**Sorting**): Changes the list ordered by number or name.



* It may differ depending on the country.

Channel Status Display Icons

Icon	Operations
	An analog channel.
	A channel selected.
	A channel set as a Favorites.
	A locked channel.
	Displays the Channel Manager option menu.

◀

Channel Manager Option Menu

▶

Set each channel using the **Channel Manager** menu options (**Watch**, **Add to Favorites /Edit Favorites**, **Lock/Unlock**, **Channel Name Edit**, **Add/Delete**, **Deselect All**, **Select All**). Option menu items may differ depending on the channel status.

1. Select a channel and press the **TOOLS** button.
2. Select a function and change its settings.
 - **Watch**: Watch the selected channel.
 - **Add to Favorites / Edit Favorites**: Set channels you watch frequently as Favoritess.
 1. Select the **Add to Favorites / Edit Favorites**, then press the **ENTER**  button.
 -  If the channel is already added to Favorites channel, **Edit Favorites** will be shown.
 2. Press the **ENTER**  button to select **Favorites 1-5**, then press the **OK** button.
 -  One Favorites channel can be added in several of Favorites among **Favorites 1-5**.

- **Lock / Unlock:** Lock a channel so that the channel cannot be selected and viewed.
 -  This function is available only when the **Channel Lock** is set to **On**.
 -  The PIN input screen appears. Enter your 4-digit PIN, the default of which is “0-0-0-0”. Change the PIN using the **Change PIN** option.
 -  If you want to lock the channel you are currently watching, select the **Lock Current Channel** in **Tools** menu.
- **Channel Name Edit** (analog channels only): Assign your own channel name.

- **Add / Delete**: Delete or add a channel to display the channels you want.



NOTE

- All deleted channels will be shown on the **All Channels** menu.
 - A gray-colored channel indicates the channel has been deleted.
 - The **Add** menu only appears for deleted channels.
- **Deselect All**: Deselect all the selected channels.
- You can only select **Deselect All** when one or more channels are selected.
- **Select All**: Select all the channels in the channel list.

Memorizing channels

 MENU  → Channel → ENTER 

■ Antenna (Air / Cable)

Before your television can begin memorizing the available channels, you must specify the type of signal source that is connected to the TV (i.e. an **Air** or a **Cable** system).

■ Auto Program

Scans for a channel automatically and stores in the TV.

- **Air**: Air antenna signal.
- **Cable**: Cable antenna signal.



NOTE

- Automatically allocated program numbers may not correspond to actual or desired program numbers. If a channel is locked, the PIN input window appears.
- If the antenna is connected to ANT 2 IN (CABLE), select **Cable** and if it is connected to ANT 1 IN (AIR), select **Air**.
- If both ANT 1 IN and ANT 2 IN are connected, select both **Air** and **Cable**.

How to Stop Auto Programming

1. Press the **ENTER**  button.
2. A message will ask **Stop Auto Program?** Select **Yes** by pressing the ◀ or ▶ button.
3. Press the **ENTER**  button.



❏ Other Features

■ Fine Tune

(analog channels only)

If the reception is clear, you do not have to fine tune the channel, as this is done automatically during the search and store operation. If the signal is weak or distorted, fine tune the channel manually.

- Select **Fine Tune** in the **Channel** menu.

✎ Fine tuned channels that have been saved are marked with an asterisk “*” on the right-hand side of the channel number in the channel banner.

✎ To reset the fine-tuning, select **Reset**.

■ Color System (Auto / PAL-M / PAL-N / NTSC)

Normally the TV can receive image and sound with good quality in **Auto** mode. This mode detects the color signal sources automatically. If the color implementation is unsatisfactory, select any of **PAL-M**, **PAL-N** or **NTSC**.



Changing the Preset Picture Mode

 MENU  → **Picture** → **Picture Mode** → ENTER 

Picture Mode

Select your preferred picture type.

 When connecting a PC, you can only make changes to the **Entertain** and **Standard**.

- **Dynamic**: Suitable for a bright room.
- **Standard**: Suitable for a normal environment.
- **Natural** : Suitable for an eye comfortable display.
- **Movie**: Suitable for watching movies in a dark room.
- **Entertain**: Suitable for watching movies and games.

 It is only available when connecting a PC.

❏ Adjusting picture settings

 MENU  → **Picture** → **Backlight** → ENTER 

■ **Backlight / Contrast / Brightness / Sharpness / Color / Tint (G/R)**

Your television has several setting options for picture quality control.

NOTE

- When you make changes to **Backlight, Contrast, Brightness, Sharpness, Color** or **Tint (G/R)** the OSD will be adjusted accordingly.
- When connecting a PC, you can only make changes to **Backlight, Contrast, Brightness** and **Sharpness**.
- Settings can be adjusted and stored for each external device connected to the TV.

■ Screen Adjustment

Set the various picture options such as picture size and aspect ratio.

- **Picture Size:** Your cable box/satellite receiver may have its own set of screen sizes as well. However, we highly recommend you use 16:9 mode most of the time.

16:9: Sets the picture to 16:9 wide mode.

Zoom1: Use for moderate magnification.

Zoom2: Use for a stronger magnification.

Wide Fit: Enlarges the aspect ratio of the picture to fit the entire screen.

4:3: Sets the picture to basic (4:3) mode.



Do not watch in 4:3 format for a long time. Traces of borders displayed on the left, right and center of the screen may cause image retention (screen burn) which are not covered by the warranty.

Screen Fit: Displays the full image without any cut-off when HDMI (720p / 1080i / 1080p) or Component (1080i / 1080p) signals are input.

Smart View1 **for LCD 550 series**: Reduces original screen by 50%.

Smart View2 **for LCD 550 series**: Reduces original screen by 25%.



NOTE

- **Smart View1** is enabled only in HDMI mode.
- **Smart View2** is enabled only in DTV and HDMI modes.
- The picture size can vary depending on the input resolution when content is played using **Videos** under **My Contents**.

- **Position**: Adjust the picture position. It is only available in **Zoom1**, **Zoom2**, **Wide Fit** or **Screen Fit**.



After selecting **Zoom1**, **Zoom2** or **Wide Fit**, select **Position**. Follow the steps below in the **Position** screen.

1. Select the **Position**, press the **ENTER**  button.
2. Press the **▲** or **▼** button to move the picture up or down.
3. Press the **ENTER**  button.



After selecting **Screen Fit** in HDMI (1080i/1080p) or Component (1080i/1080p) mode, you may need to center the picture. Select **Position**, then follow the steps below in the **Position** screen.

1. Select the **Position**, press the **ENTER**  button.
2. Press the **▲**, **▼**, **◀** or **▶** button to move the picture.
3. Press the **ENTER**  button.



If you want to reset the position you adjusted, select **Reset** in the **Position** screen. The picture will be set to its default position.

-  HD (High Definition): 16:9 - 1080i/1080p (1920x1080), 720p (1280x720)
-  Settings can be adjusted and stored for each external device you have connected to an input on the TV.

Input Source	Picture Size
ATV, AV	16:9, Zoom1, Zoom2, 4:3
Component (480i, 480p, 576i, 576p)	16:9, Zoom1, Zoom2, 4:3
DTV (720p, 1080i, 1080p)	16:9, Wide Fit, 4:3, Screen Fit, Smart View2
Component (720p, 1080i, 1080p)	16:9, Wide Fit, 4:3, Screen Fit
HDMI (720p, 1080i, 1080p)	16:9, Wide Fit, 4:3, Screen Fit, Smart View1, Smart View2
PC	16:9, 4:3

- **PC Screen Adjustment**

 It is available in **PC** mode.

Coarse / Fine: Removes or reduces picture noise. If the noise is not removed by Fine-tuning alone, then adjust the frequency as best as possible (**Coarse**) and Fine-tune again. After the noise has been reduced, readjust the picture so that it is aligned to the center of screen.

Position: Adjust the PC's screen positioning if it does not fit the TV screen. Press the ▲ or ▼ button to adjust the Vertical-Position. Press the ◀ or ▶ button to adjust the Horizontal-Position.

Image Reset: Resets the image to default settings.

■ Auto Adjustment **TOOLS**

 **MENU**  → **Picture** → **Auto Adjustment** → **ENTER** 

Adjust frequency values/positions and fine tune the settings automatically.

 It is available in **PC** mode.

 Not available when connecting through HDMI/DVI cable.

Using Your TV as a Computer (PC) Display

Setting Up Your PC Software (Based on Windows XP)

Depending on the version of Windows and the video card, the actual screens on your PC will probably look different, but the same basic set-up information will apply in most cases. (If not, contact your computer manufacturer or Samsung Dealer.)

1. Click on “Control Panel” on the Windows start menu.
2. Click on “Appearance and Themes” in the “Control Panel” window and a display dialog-box will appear.
3. Click on “Display” and a display dialog box will appear.
4. Navigate to the “Settings” tab on the display dialog-box.
 - The correct size setting (resolution)
 - If a vertical-frequency option exists on your display settings dialog box, the correct value is ‘60’ or ‘60 Hz’. Otherwise, just click ‘OK’ and exit the dialog box.

❑ Changing the Picture Options

■ Advanced Settings


🖱️ **MENU**  → **Picture** → **Advanced Settings** → **ENTER** 

(available in **Standard / Movie** mode)

Compared to previous models, new Samsung TVs have more precise pictures.

📝 When connecting a PC, you can only make changes to **Gamma** and **White Balance**.

- **Black Tone (Off / Dark / Darker / Darkest)**: Select the black level to adjust the screen depth.

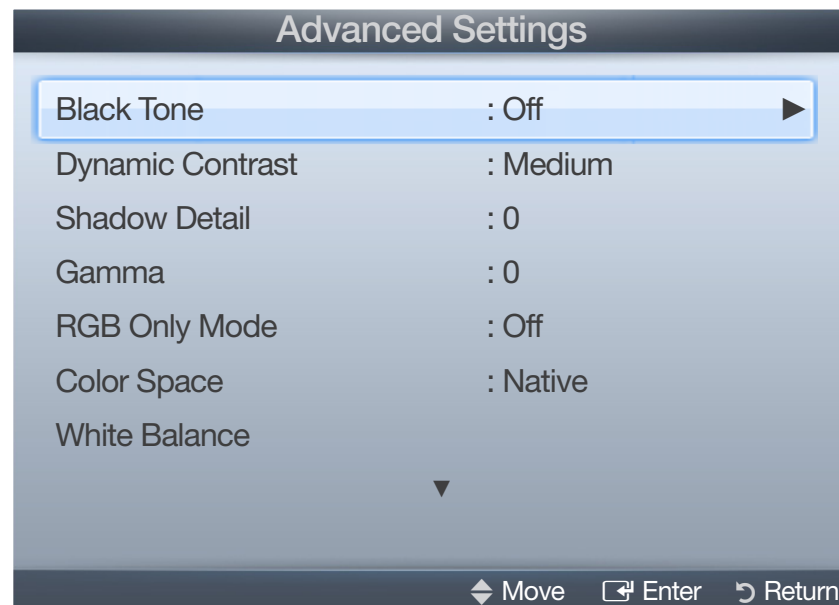

- **Dynamic Contrast (Off / Low / Medium / High)**: Adjust the screen contrast.
- **Shadow Detail**: Increase the brightness of dark images.
- **Gamma**: Adjust the primary color intensity.
- **RGB Only Mode (Off / Red / Green / Blue)**: Displays the Red, Green and Blue color for making fine adjustments to the hue and saturation.
- **Color Space (Auto / Native)**: Adjust the range of colors available to create the image.



- **White Balance:** Adjust the color temperature for a more natural picture.
R-Offset / G-Offset / B-Offset: Adjust each color's (red, green, blue) darkness.
R-Gain / G-Gain / B-Gain: Adjust each color's (red, green, blue) brightness.
Reset: Resets the **White Balance** to it's default settings.
- **Flesh Tone:** Emphasize pink "Flesh Tone".
- **Edge Enhancement (Off / On):** Emphasize object boundaries.
- **Motion Lighting (Off / On):** Reduce power consumption by brightness control adapted motion.

■ Picture Options


 **MENU**  → **Picture** → **Picture Options** → **ENTER** 

 When connecting a PC, you can only make changes to the **Color Tone**.

- **Color Tone (Cool / Standard / Warm1 / Warm2)**

 **Warm1** or **Warm2** will be deactivated when the picture mode is **Dynamic**.

 Settings can be adjusted and stored for each external device connected to an input on the TV.

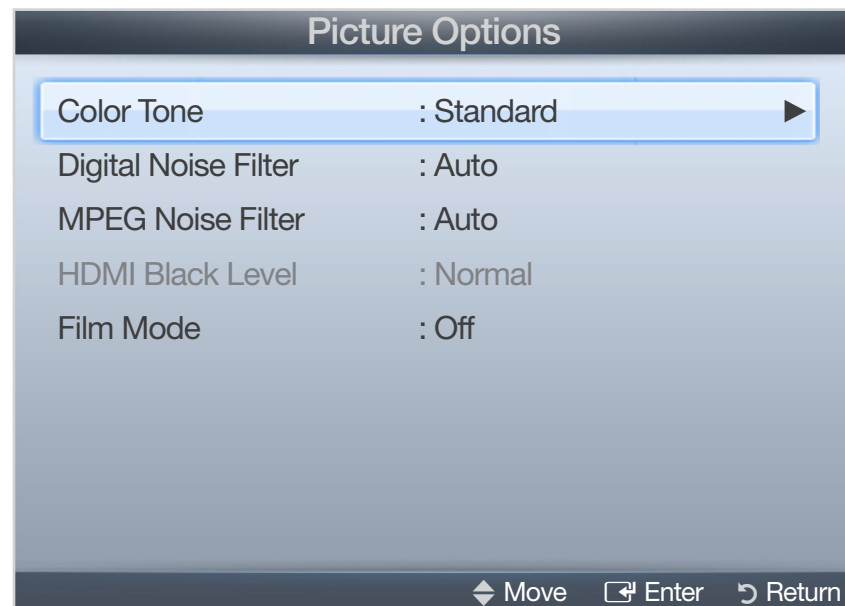

- **Digital Noise Filter (Off / Low / Medium / High / Auto / Auto Visualization):**
If the broadcast signal received by your TV is weak, you can activate the **Digital Noise Filter** feature to reduce any static and ghosting that may appear on the screen.

 When the signal is weak, try other options until the best picture is displayed.

Auto Visualization: When changing analog channels, displays signal strength.

 Only available for analog channels.

 When bar is green, you are receiving the best possible signal.

- **MPEG Noise Filter (Off / Low / Medium / High / Auto):** Reduces MPEG noise to provide an improved picture quality.

- **HDMI Black Level (Low / Normal)**: Selects the black level on the screen to adjust the screen depth.
 Available only in **HDMI** mode (RGB signals).
- **Film Mode (Off / Auto1 / Auto2)**: Sets the TV to automatically sense and process film signals from all sources and adjusts the picture for optimum quality.
 Available in ATV, AV, COMPONENT (480i / 1080i) and HDMI (1080i).
 If the screen does not seem natural, change its option to **Off / Auto1 / Auto2** in **Film Mode**.

■ Reset Picture (OK / Cancel)

Resets your current picture mode to its default settings.



Changing the Preset Sound Mode

 MENU  → **Sound** → **Sound Mode** → ENTER 

■ **Sound Mode**

- **Standard**: Selects the normal sound mode.
- **Music**: Emphasizes music over voices.
- **Movie**: Provides the best sound for movies.
- **Clear Voice**: Emphasizes voices over other sounds.
- **Amplify**: Increase the intensity of high-frequency sounds to allow a better listening experience for the hearing impaired.

Sound Settings

 MENU  → **Sound** → **Sound Effect** → **ENTER** 

■ **Sound Effect**

(standard sound mode only)

Use the up and down arrow keys to select an option, and then press **ENTER** .

- **SRS TruSurround HD (Off / On)**

This function provides a virtual 5.1 channel surround sound experience through a pair of speakers or headphones using HRTF (Head Related Transfer Function) technology.

- **SRS TruDialog (Off / On)**

This function allows you to increase the intensity of a voice over background music or sound effects so that dialog can be heard more clearly.

- **Equalizer**

Use **Equalizer** to customize sound setting for each speaker.

Balance L/R: Adjusts the balance between the right and left speaker.

100Hz / 300Hz / 1kHz / 3kHz / 10kHz (Bandwidth Adjustment): Adjusts the level of specific bandwidth frequencies.

Reset: Resets the equalizer to its default settings.



Adjusting Sound Settings

Broadcast Audio Options

- Audio Language

(digital channels only)

Change the default value for audio languages.

 The available language may differ depending on the broadcast.



- **Multi-Track Sound (MTS)** **TOOLS**

(analog channels only)

Mono: Choose for channels that are broadcasting in mono or if you are having difficulty receiving a stereo signal.

Stereo: Choose for channels that are broadcasting in stereo.

SAP: Choose to listen to the Separate Audio Program, which is usually a foreign-language translation.

 Depending on the particular program being broadcast, you can listen to **Mono, Stereo** or **SAP**.

■ SPDIF Output

SPDIF (Sony Philips Digital InterFace) is used to provide digital sound, reducing interference going to speakers and various digital devices such as a DVD player.

- **Audio Format:** You can select the Digital Audio output (SPDIF) format. The available Digital Audio output (SPDIF) format may differ depending on the input source.
 -  By connecting to 5.1ch speakers in a dolby digital setup, maximize your interactive 3D sound experience.
- **Audio Delay:** Correct audio-video mismatch, when watching TV or video, and listening to digital audio output using an external device such as an AV receiver (0ms ~ 250ms).

■ Speaker Settings

- **Speaker Select (External Speaker / TV Speaker)**

A sound echo may occur due to a difference in decoding speed between the main speaker and the audio receiver. In this case, set the TV to **External Speaker**.



When **Speaker Select** is set to **External Speaker**, the volume and **MUTE** buttons will not operate and the sound settings will be limited.



When **Speaker Select** is set to **External Speaker**, you should use these settings.

- **TV Speaker:** Off, **External Speaker:** On

 When **Speaker Select** is set to **TV Speaker**, you should use these settings.

- **TV Speaker**: On, **External Speaker**: On

 If there is no video signal, both speakers will be mute.

- **Auto Volume (Off / Normal / Night)**

To equalize the volume level on each channel, set to **Normal**.

Night: This mode provides an improved sound experience compared to **Normal** mode, making almost no noise. It is useful at night.

 To use the volume control on the source device connected to the TV, set **Auto Volume** to **Off** on the TV. Otherwise, a change to the volume control of the source device may not be applied.

■ Reset Sound (OK / Cancel)

Reset all sound settings to the factory defaults.



Setting the Network for LCD 550 series

■ Network Settings

 MENU  → Network → Network Settings → ENTER 

Set the network connection to use AllShare™ and perform software upgrade.

■ Network Status

 MENU  → Network → Network Status → ENTER 

You can check the current network and Internet status.

■ AllShare Settings


 MENU  → Network → AllShare Settings → ENTER 

Selects whether to use media functions on the network. For details on set up options, refer to the “AllShare™” instructions.


❑ Connecting to a Wired Network

You can attach your TV to your LAN using cable in three ways:


- You can attach your TV to your LAN by connecting the LAN port on the back of your TV to an external modem using a LAN cable. See the diagram below.

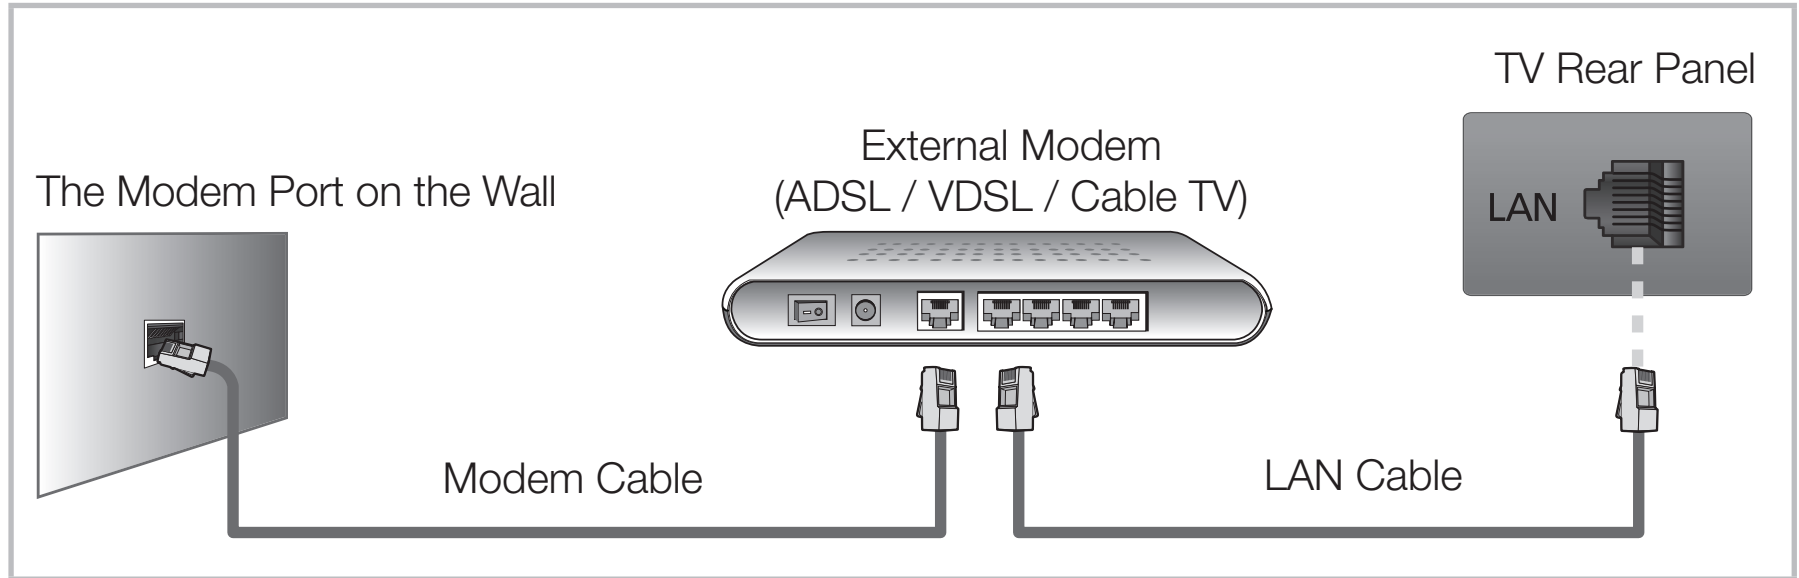

- You can attach your TV to your LAN by connecting the LAN port on the back of your TV to a IP Sharer which is connected to an external modem. Use LAN cable for the connection. See the diagram below.

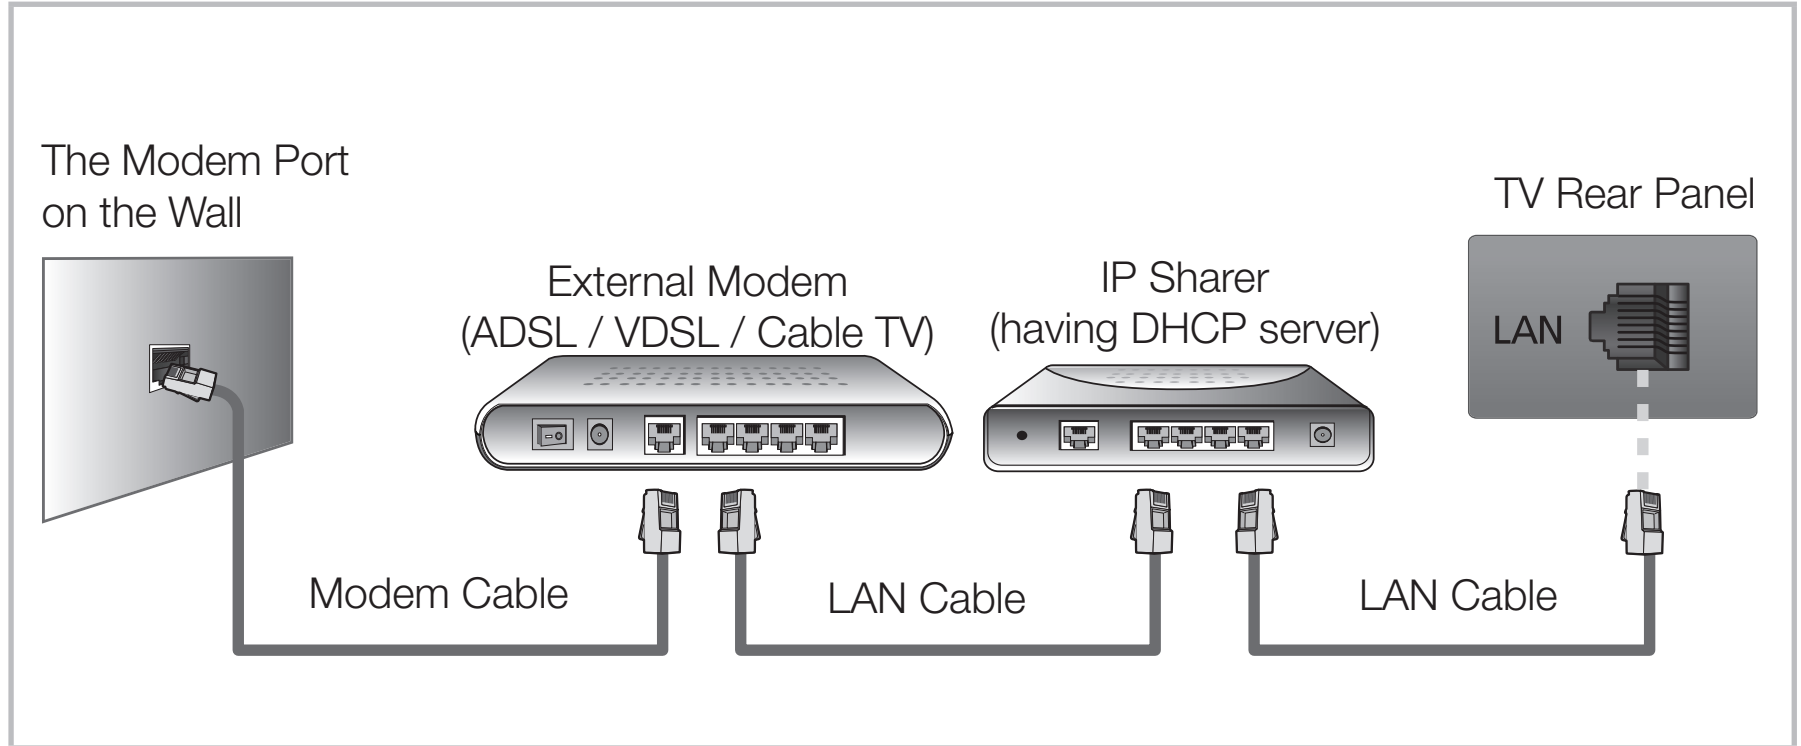

- Depending on how your network is configured, you may be able to attach your TV to your LAN by connecting the LAN port on the back of your TV directly to a network wall outlet using a LAN cable. See the diagram below. Note that the wall outlet is attached to a modem or router elsewhere in your house.

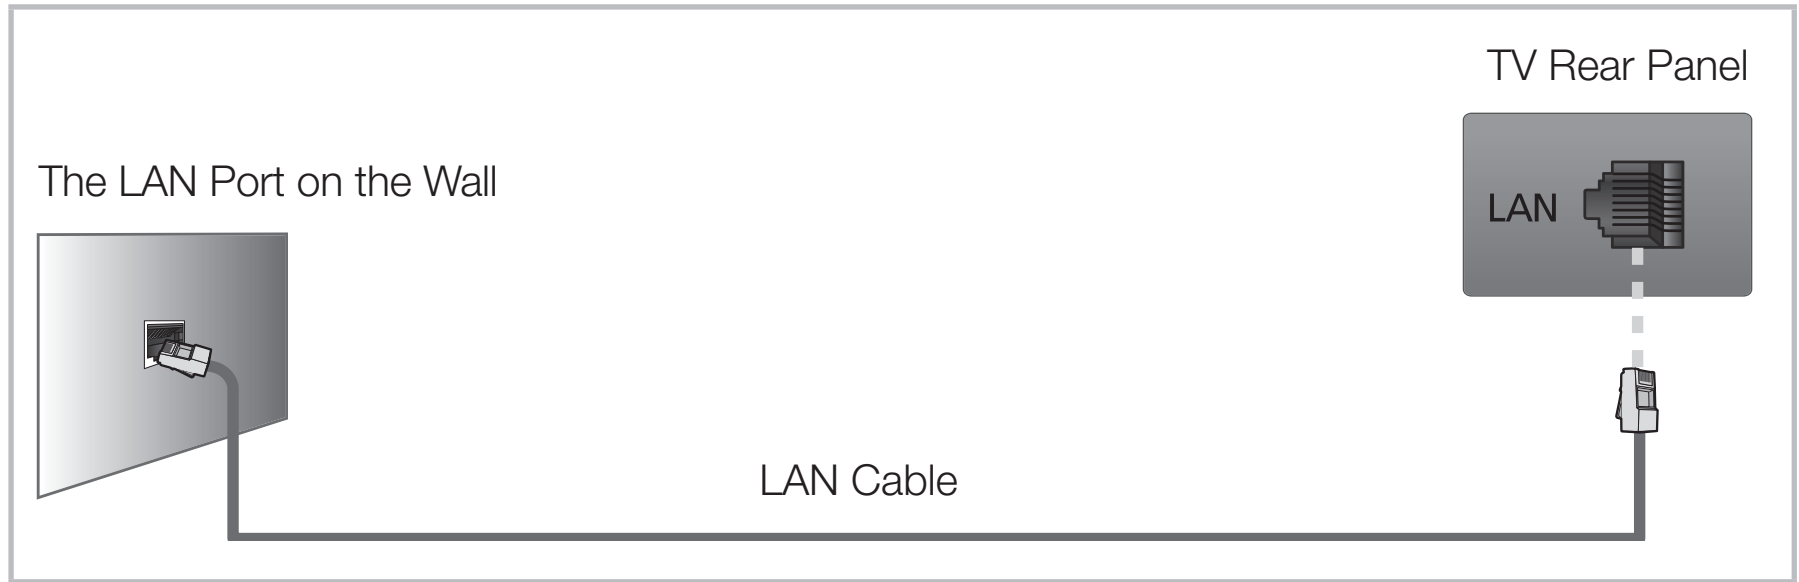

- If you have a Dynamic Network, you should use an ADSL modem or router that supports Dynamic Host Configuration Protocol (DHCP). Modems and routers that support DHCP automatically provide the IP address, subnet mask, gateway, and DNS values your TV needs to access the Internet so you do not have to enter them manually. Most home networks are Dynamic Networks. Some networks require a Static IP address. If your network requires a Static IP address, you must enter the IP address, subnet mask, gateway, and DNS values manually on your TV's Cable Setup Screen when you set up the network connection. To get the IP address, subnet mask, gateway, and DNS values, contact your Internet Service Provider (ISP). If you have a Windows computer, you can also get these values through your computer.

 You can use ADSL modems that support DHCP if your network requires a Static IP address. ADSL modems that support DHCP also let you use Static IP addresses.


 A network speed of lower than 10 Mbps is not supported.

■ Network Setup (Auto)

Use the Automatic Network Setup when connecting your TV to a network that supports DHCP. To set up your TV's cable network connection automatically, follow these steps:

How to set up automatically

1. Go to **Network Settings** screen. To enter it, follow the directions of **Network Settings**.
2. Select the **Wired**.
3. The network connection screen appears, and network setting is done.

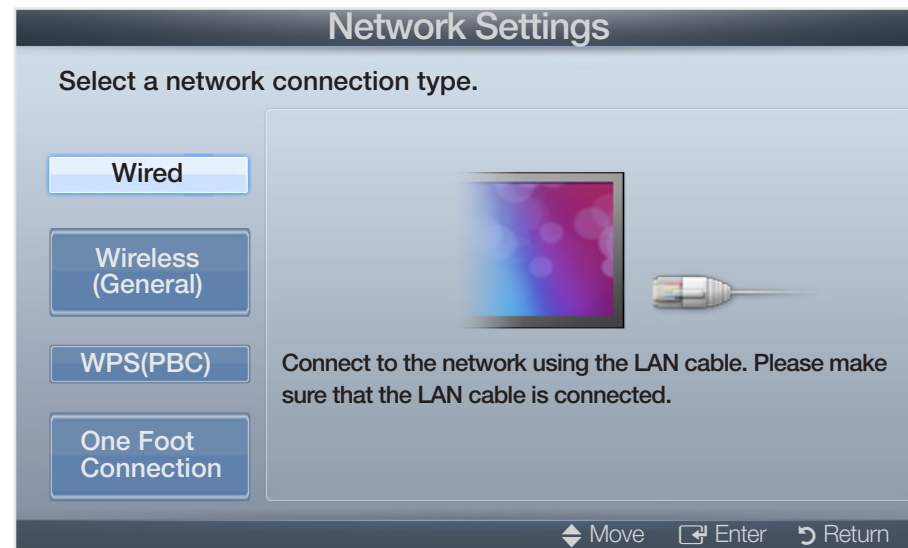

- ✎ If it fails to set automatically, check the connection of LAN port.
- ✎ If you cannot find network connection values or if you want to set connection manually, set it to Manual. Refer to following “How to set up manually”.



■ Network Setup (Manual)

Use the Manual Network Setup when connecting your TV to a network that requires a Static IP address.

Getting the Network Connection Values


To get the Network connection values on most Windows computers, follow these steps:

1. Right click the Network icon on the bottom right of the screen.
2. In the pop-up menu that appears, click Status.
3. On the dialog that appears, click the Support tab.
4. On the Support Tab, click the Details button. The Network connection values are displayed.

How to set up manually

To set up your TV's cable network connection manually, follow these steps:

1. Follow Steps 1 through 2 in the "How to set up automatically" procedure.
2. Select the **IP Settings** on network connection screen.
3. Set **IP Mode** to **Manual**.
4. Press the ▼ button on your remote control to go to the first entry field.

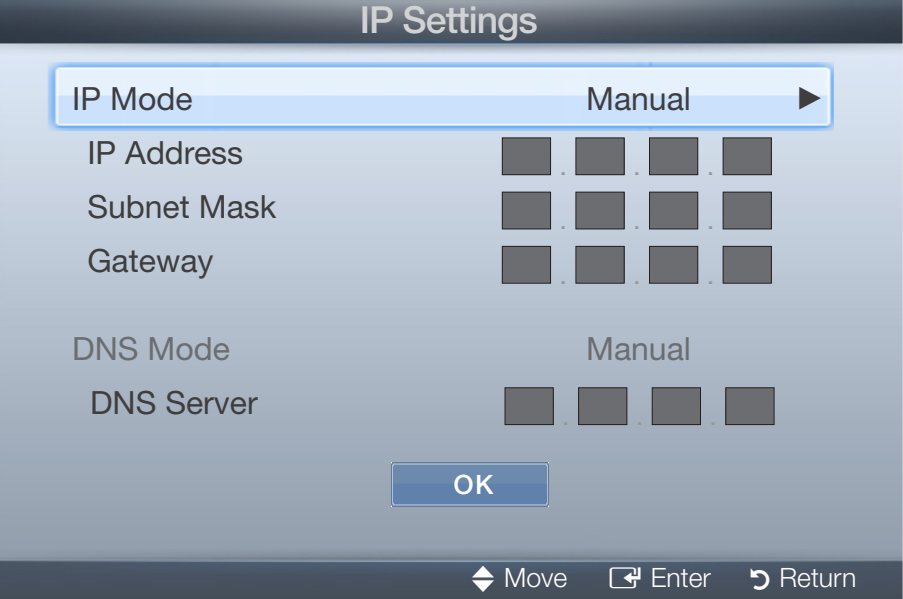

IP Settings

IP Mode Manual ▶

IP Address [] . [] . [] . []

Subnet Mask [] . [] . [] . []

Gateway [] . [] . [] . []

DNS Mode Manual

DNS Server [] . [] . [] . []


OK

◄ Move ◀ Enter ▶ Return

5. Enter the **IP Address**, **Subnet Mask**, **Gateway**, and **DNS Server** values. Use the number buttons on your remote control to enter numbers and the arrow buttons to move from one entry field to another.
6. When done, select the **OK**.
7. The network connection screen appears, and network setting is done.

❑ Connecting to a Wireless Network for LCD 550 series

To connect your TV to your wireless network, you need a wireless router or modem and a Samsung Wireless LAN Adapter (WIS09ABGN, WIS09ABGN2, WIS10ABGN), which you connect to your TV's back or side panel USB port. See the illustration below.

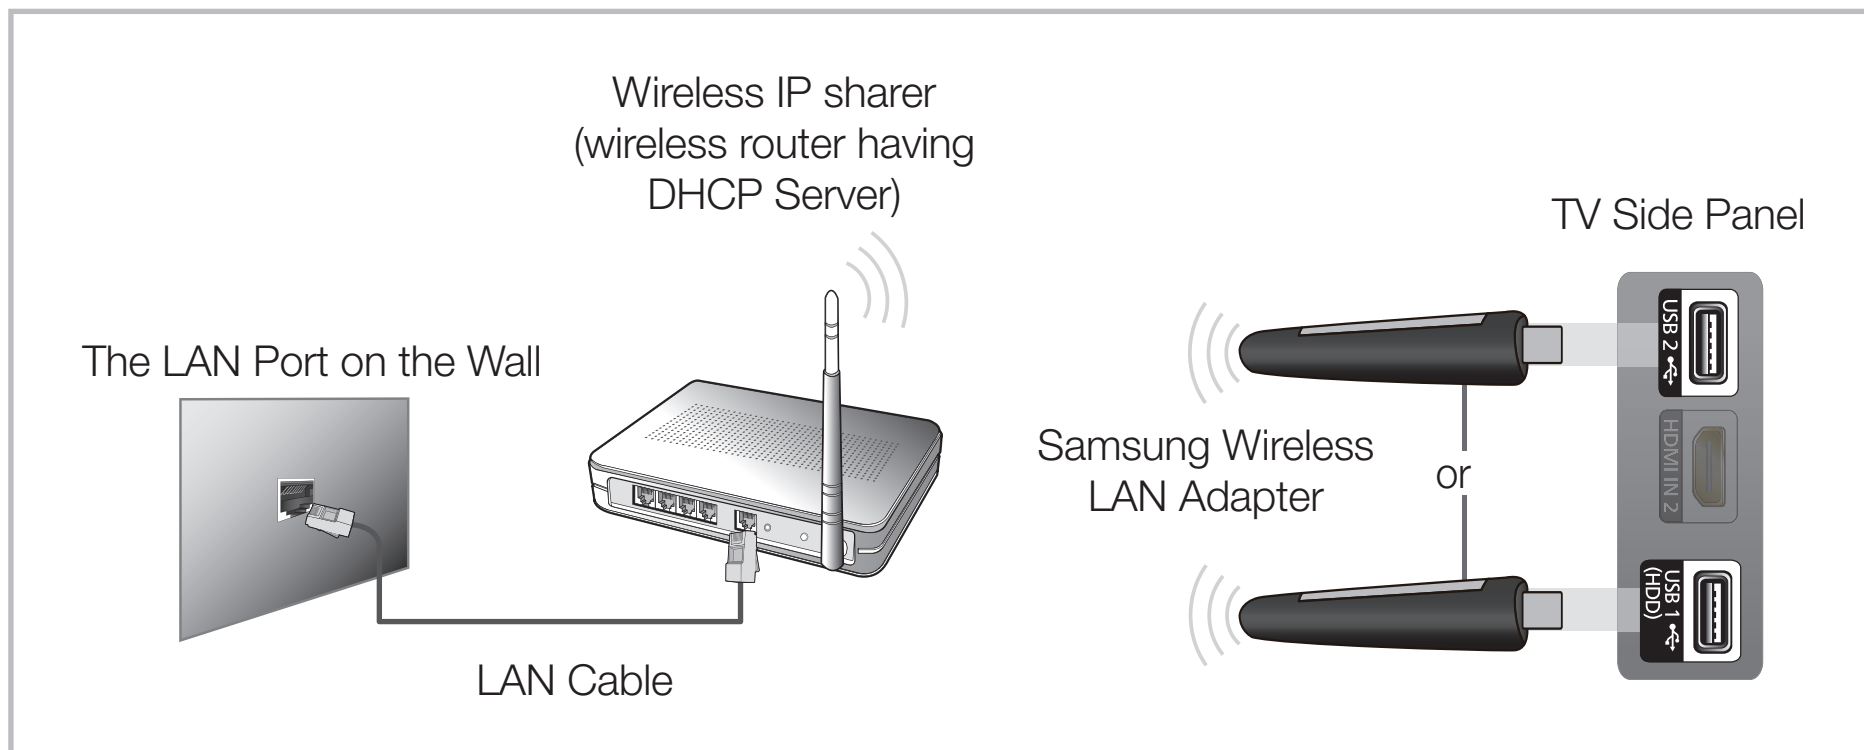

Samsung's Wireless LAN adapter is sold separately and is offered by selected retailers, Ecommerce sites and Samsungparts.com. Samsung's Wireless LAN adapter supports the IEEE 802.11a/b/g and n communication protocols. Samsung recommends using IEEE 802.11n. When you play video over a network connection, the video may not be played smoothly.



NOTE

- You must use the “Samsung Wireless LAN Adapter” (WIS09ABGN, WIS09ABGN2, WIS10ABGN) to use a wireless network.
- Samsung Wireless LAN Adapter and The USB extension Cable are sold separately and are offered by selected retailers, Ecommerce sites and Samsungparts.com.
- To use a wireless network, your TV must be connected to a wireless IP sharer (either a router or a modem). If the wireless IP sharer supports DHCP, your TV can use a DHCP or static IP address to connect to the wireless network.

- Select a channel for the wireless IP sharer that is not currently being used. If the channel set for the wireless IP sharer is currently being used by another device nearby, this will result in interference and communication failure.
- If you apply a security system other than the systems listed below, it will not work with the TV.
- If HIGH PURE THROUGHPUT (Greenfield) 802.11n mode is selected and the Encryption type is set to WEP, TKIP or TKIP AES (WPS2Mixed) for your wireless router, Samsung TVs will not support a connection in compliance with new Wi-Fi certification specifications.
- If your wireless router supports WPS (Wi-Fi Protected Setup), you can connect to the network via PBC (Push Button Configuration) or PIN (Personal Identification Number). WPS will automatically configure the SSID and WPA key in either mode.

- If your router, modem, or device is not certified, it may not connect to the TV via the “Samsung Wireless LAN Adapter.”
- Ensure the TV is turned off before you connect the Samsung Wireless LAN Adapter.
- Connection Methods: You can setup the wireless network connection on four ways.
 - Auto Setup (Using the Auto Network Search function)
 - Manual Setup
 - **WPS (PBC)**
 - **One Foot Connection**
- The Samsung Wireless LAN Adapter may not be recognized when using a connection via a USB hub or via a USB extension cable other than the cable supplied.

Notice

The picture may appear corrupted or have static for some channels when the TV is connected to the Samsung Wireless LAN Adapter. In such a case, establish a connection using one of the following methods or connect the Samsung Wireless LAN Adapter using a USB cable in a place that is not affected by radio interference.

Method 1

Connect using the USB right angle adapter.

To connect the Samsung Wireless LAN Adapter using the USB right angle adapter, follow these steps:

1. Connect the USB right angle adapter to the Samsung Wireless LAN Adapter.
2. Connect the other end of the right angle adapter to the USB 1 (HDD) port.




Method 2

Connect via an extension cable.

To reconnect the Samsung Wireless LAN Adapter using the extension cable, follow these steps:

1. Connect the extension cable to the USB 1 (HDD) port.
2. Connect the extension cable and Samsung Wireless LAN Adapter.
3. Attach the Samsung Wireless LAN Adapter to the back of the TV near the top, using double-sided adhesive tape.

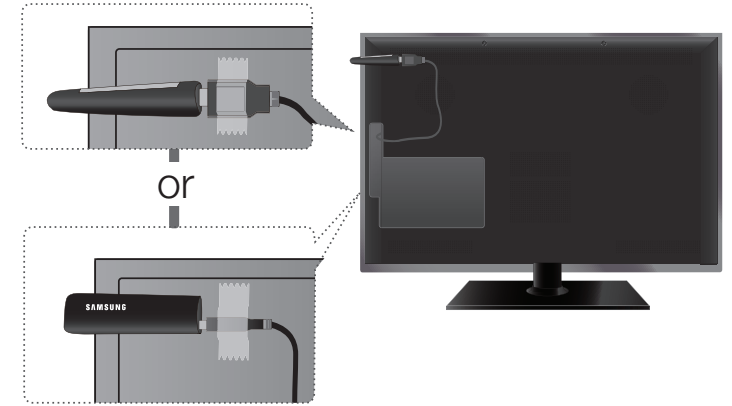


■ Network Setup (Auto)

Most wireless networks have an optional security system that requires devices that access the network to transmit an encrypted security code called an Access or Security Key. The Security Key is based on a Pass Phrase, typically a word or a series of letters and numbers of a specified length you were asked to enter when you set up security for your wireless network. If you use this method of setting up the network connection, and have a Security Key for your wireless network, you will have to enter the Pass Phrase during the setup process.

How to set up automatically

1. Go to **Network Settings** screen.
To enter it, follow the directions of **Network Settings**.
2. Select the **Wireless (General)**.

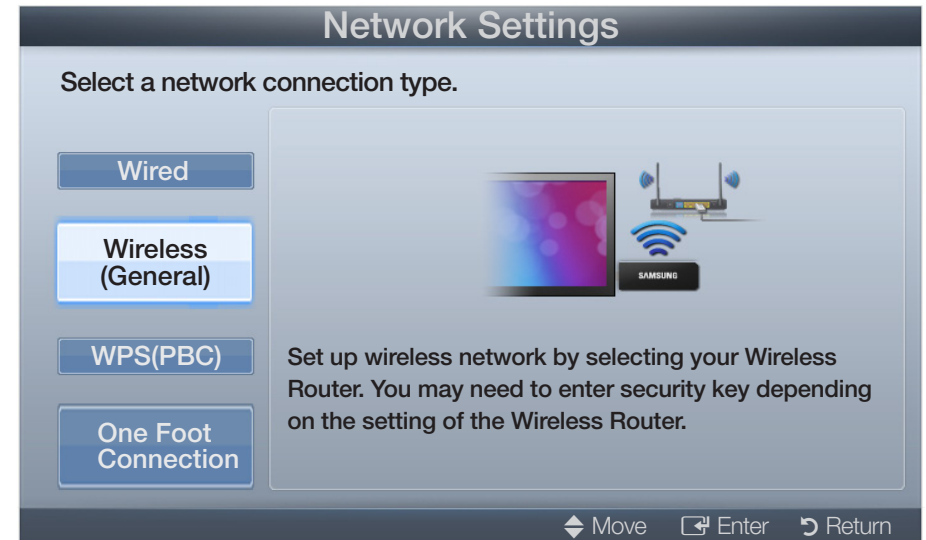

3. The Network function searches for available wireless networks. When done, it displays a list of the available networks.
4. In the list of networks, press the ▲ or ▼ button to select a network, and then press the **ENTER**  button.
 -  If the wireless router is set to Hidden (Invisible), you have to select **Add Network** and enter the correct network **Name (SSID)** and Security key to establish the connection.
5. If the Security screen pop-up appears, go to step 6. If you select the wireless router which does not have security, go to step 7.

6. If the wireless router has security, enter the security key(Security or PIN), then select **Done**.


 When you enter the security key(Security or PIN), use ▲/▼/◀/▶ buttons on your remote control to select number/characters.

 You should be able to find the Pass Phrase on one of the set up screens you used to set up your router or modem.

7. The network connection screen appears, and network setting is done.

 If it fails to set security key(Security or PIN), select **Retry** or **IP Settings**.

 If you want to set connection manually, select the **IP Settings**. Refer to following “How to set up manually”.

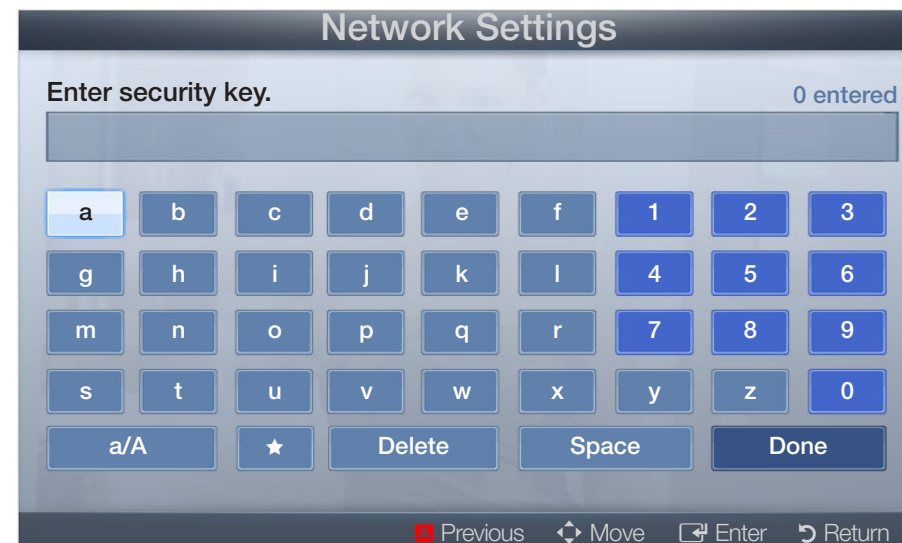

■ Network Setup (Manual)

Use the Manual Network Setup when connecting your TV to a network that requires a Static IP address.

Getting the Network Connection Values

To get the Network connection values on most Windows computers, follow these steps:

1. Right click the Network icon on the bottom right of the screen.
2. In the pop-up menu that appears, click Status.
3. On the dialog that appears, click the Support tab.
4. On the Support Tab, click the Details button. The Network connection values are displayed.

How to set up manually

To set up your TV's cable network connection manually, follow these steps:


1. Follow Steps 1 through 2 in the "How to set up automatically" procedure.
2. Select the **IP Settings** on network connection screen.
3. Set **IP Mode** to **Manual**.
4. Press the ▼ button on your remote control to go to the first entry field.
5. Enter the **IP Address**, **Subnet Mask**, **Gateway**, and **DNS Server** values.
Use the number buttons on your remote control to enter numbers and the arrow buttons to move from one entry field to another.
6. When done, select the **OK**.
7. The network connection screen appears, and network setting is done.

■ Network Setup (WPS(PBC))

How to set up using WPS(PBC)

If your router has a PBC (WPS) button, follow these steps:

1. Go to **Network Settings** screen. To enter it, follow the directions of **Network Settings**.
2. Select the **WPS(PBC)**.
3. Press the WPS(PBC) button on your router within 2 minutes. Your TV automatically acquires all the network setting values it needs and connects to your network.
4. The network connection screen appears, and network setting is done.

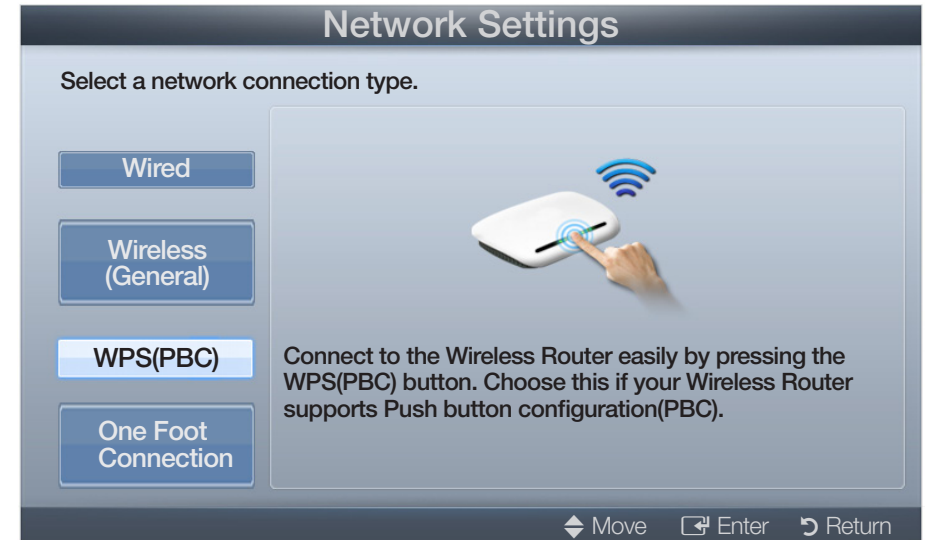

■ Network Setup (One Foot Connection)


The **One Foot connection** make you easy to connect samsung TV and samsung wireless router by placing samsung wireless router within 1foot(25cm) from samsung TV. If your wireless router does not support **One Foot Connection**, you must connect using one of the other methods.

 You can check for equipment that supports **One Foot Connection** on www.samsung.com.

How to set up using One Foot Connection

Turn on the power of wireless router and TV.

1. Go to **Network Settings** screen.
To enter it, follow the directions of **Network Settings**.
2. Select the **One Foot Connection**.

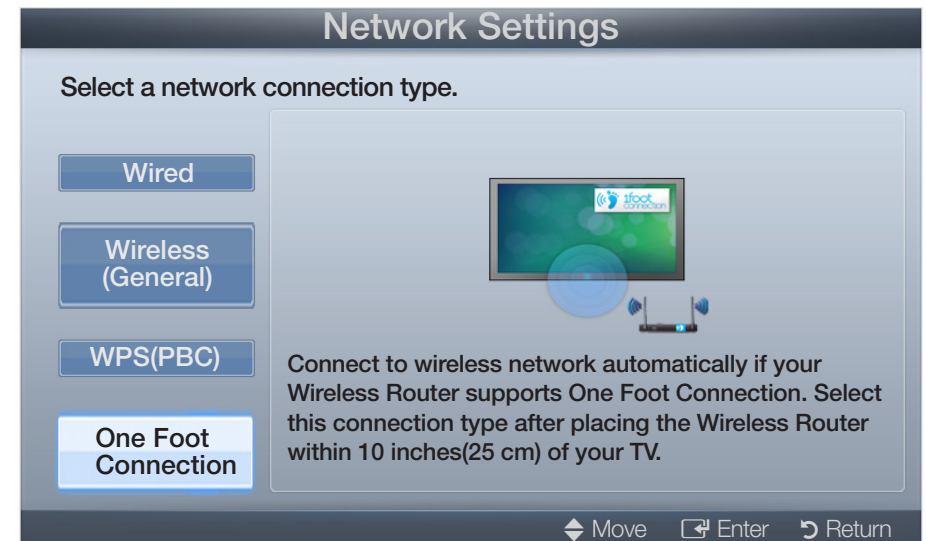

3. Place the wireless router in parallel with the Samsung Wireless LAN Adapter giving a gap no larger than 25cm.
4. Wait until the connection is automatically established.
5. The network connection screen appears, and network setting is done.
6. Place the wireless router in a desired location.
 -  If the wireless router settings change or you install a new wireless router, you must perform the **One Foot Connection** procedure again, beginning from Step 1.

■ Network Setup (Ad-Hoc)

You can connect to a mobile device supporting Ad-hoc without an wireless router through the “Samsung Wireless LAN Adapter”. When connecting mobile device, you can use files on device.

How to connect to new Ad-hoc

1. Go to **Network Settings** screen. To enter it, follow the directions of **Network Settings**.
2. Select the **Wireless (General)**.
3. When select the **Ad hoc**, the message "**Ad hoc service supports a direct connection with Wi-Fi compatible devices like a cell phone or PC. The existing network system may have limited functionality. Do you want to change the network connection?**". is displayed.

4. Input the generated **Network Name (SSID)** and **Security Key** into the device you want to connect.
-  If network does not operate normally, check the **Network Name (SSID)** and **Security Key** again. An incorrect **Security Key** may cause a malfunction.
 -  If a device is connected once, it is displayed in network setting list. When you connect it again, you can find it in network setting list.

If Your TV Fails to Connect to the Internet

Your TV may not be able to connect to the Internet because your ISP has permanently registered the MAC address (a unique identifying number) of your PC or modem, which it then authenticates each time you connect to the Internet as a way of preventing unauthorized access. As your TV has a different MAC address, your ISP can not authenticate its MAC address, and your TV can not connect.

To resolve this problem, ask your ISP about the procedures required to connect devices other than a PC (such as your TV) to the Internet.

If your Internet service provider requires an ID or password to connect to the Internet, your TV may not be able to connect to the Internet. If this is the case, you must enter your ID or password when connecting to the Internet.

The internet connection may fail because of a firewall problem. If this is the case, contact your Internet service provider.

If you cannot connect to the Internet even after you have followed the procedures of your Internet service provider, please contact Samsung Electronics.

Setting the Time

 MENU  → **System** → **Time** → ENTER 

■ **Time**

 The current time will appear every time you press the **INFO** button.

- **Clock**: Setting the clock is for using various timer features of the TV.

 If you disconnect the power cord, you have to set the clock again.

Clock Mode: Set up the current time manually or automatically.

- **Auto**: Set the current time automatically using the time from a digital channel.

 The antenna must be connected in order to set the time automatically.

- **Manual**: Set the current time manually.

-  Depending on the broadcast station and signal, the auto time set up may not be correct. In this case, set the time manually.

Clock Set: Set the **Day**, **Month**, **Year**, **Hour**, **Minute** and **am/pm**.

-  Available only when **Clock Mode** is set to Manual.
-  You can set the day, month, year, hour and minute directly by pressing the number buttons on the remote control.

Time Zone **for Brazil, Chile**: Select your time zone.

-  This function is only available when the **Clock Mode** is set to **Auto**.

Using the Sleep Timer

 MENU  → **System** → **Time** → **Sleep Timer** → ENTER 

- **Sleep Timer** : Automatically shuts off the TV after a preset period of time. (30, 60, 90, 120, 150 and 180 minutes).

 To cancel the **Sleep Timer**, select **Off**.

❑ Setting the On/Off Timer

👉 MENU  → System → Time → ENTER 

- **On Timer:** Three different on timer settings can be made. You must set the clock first.

Setup: Select **Off, Once, Everyday, Mon~Fri, Mon~Sat, Sat~Sun** or **Manual** to set at your convenience. If you select **Manual**, you can set up the day you want to activate the timer.

📝 The ✓ mark indicates the day is selected.

On Time: Set the hour, minute, am/pm.

Volume: Set the desired volume level.



The image shows a TV menu screen titled "On Timer 1". It has several sections: "Setup" with a dropdown menu currently showing "Once" and seven checkboxes for days of the week (Sun, Mon, Tue, Wed, Thu, Fri, Sat); "On Time" with fields for hour (04), minute (00), and am/pm (am); "Volume" with a field showing 20; "Source" with a field showing TV; "Antenna" with a field showing Cable; and "Channel" with a field showing 3. At the bottom, there is a navigation bar with icons and labels for Adjust, Move, Enter, and Return.

Setup	Sun	Mon	Tue	Wed	Thu	Fri	Sat
Once	☐	☐	☐	☐	☐	☐	☐

On Time	Volume
04 00 am	20

Source	Antenna	Channel
TV	Cable	3

Adjust Move Enter Return

Source: Select **TV** or **USB** content to be played when the TV is turned on automatically. (USB can be selected only when a USB device is connected to the TV)

Antenna (when the **Source** is set to **TV**): Select **Air** or **Cable**.

Channel (when the **Source** is set to **TV**): Select the desired channel.

Music / Photo (when the **Source** is set to **USB**): Select a folder in the USB device containing music or photo files to be played when the TV is turned on automatically.

-  If there is no music file on the USB device or the folder containing a music file is not selected, the Timer function does not operate correctly.
-  When there is only one photo file in the USB, the Slide Show will not play.
-  A folder with too long of a name cannot be selected.
-  Each USB you use is assigned its own folder. When using more than one of the same type of USB, make sure the folders assigned to each USB have different names.

- ✎ It is recommended that you use a USB memory stick and a multi card reader when using **On Timer**.
- ✎ The **On Timer** function may not work with USB devices with a built-in battery, MP3 players, or PMPs made by some manufacturers because these devices take a long time to be recognized.

- **Off Timer**: Three different off timer settings can be made. You must set the clock first.

Setup: Select **Off, Once, Everyday, Mon~Fri, Mon~Sat, Sat~Sun** or **Manual** to set at your convenience. If you select Manual, you can set up the day you want to activate the timer.

- ✎ The ✓ mark indicates the day is selected.

Off Time: Set the hour, minute, and am/pm.

Off Timer 1

Setup

Once

Sun Mon Tue Wed Thu Fri Sat

Off Time

04 00 am

◀ Move ♦ Adjust ⏎ Enter ↩ Return

Locking Programs

 MENU  → **System** → **Security** → ENTER 

■ **Security**

-  The PIN input screen appears before the setup screen.
-  Enter your 4-digit PIN, the default of which is 0-0-0-0. Change the PIN using the Change PIN option.
 - **Channel Lock (Off / On)**: Lock channels in **Channel Manager**, to prevent unauthorized users, such as children, from watching unsuitable program.
 - **Program Rating Lock**: Prevent unauthorized users, such as children, from watching unsuitable program with a user defined 4-digit PIN code.
 -  It is only available in Brazil signal.

- **Change PIN:** The **Change PIN** screen will appear. Choose any 4 digits for your PIN and enter it in the **Enter New PIN**. Re-enter the same 4 digits in the **Confirm New PIN**. When the Confirm screen appears, press the **OK** button. Your PIN has been memorized.



If you forget the PIN code, press the remote control buttons in the following sequence in Standby mode, which resets the PIN to “0-0-0-0” :
MUTE → 8 → 2 → 4 → **POWER** (on)

Picture In Picture (PIP)

 MENU  → **System** → **PIP** → ENTER 

■ **PIP** **TOOLS**

You can watch the TV tuner and one external video source simultaneously. **PIP** (Picture-in-Picture) does not function in the same mode.

NOTE

- For PIP sound, refer to the **Sound Select** instructions.
- If you turn the TV off while watching in PIP mode, the PIP window will disappear.
- You may notice that the picture in the PIP window becomes slightly unnatural when you use the main screen to view a game or karaoke.

- PIP Settings

Main picture	Sub picture
Component, HDMI, PC	TV

- **PIP (Off / On)**: Activate or deactivate the PIP function.
- **Air/Cable (Air / Cable)**: Select either **Air** or **Cable** as the input source for the sub-screen.
- **Channel**: Select the channel for the sub-screen.
- **Size** ( / ): Select a size for the sub-picture.
- **Position** ( /  /  / ): Select a position for the sub-picture.
- **Sound Select (Main / Sub)**: You can choose the desired sound (**Main** or **Sub**) in **PIP** mode.

Economical Solutions

■ Eco Solution

- **Energy Saving (Off / Low / Medium / High / Picture Off)** **TOOLS** : This adjust the brightness of the TV in order to reduce power consumption. If you select **Picture Off**, the screen is turned off, but the sound remains on. Press any button except volume button to turn on the screen.
- **Eco Sensor (Off / On)** **for LCD 550 series**: To enhance your power savings; the picture settings will automatically adapt to the light in the room.

 If you adjust the **Backlight**, the **Eco Sensor** will be set to **Off**.

Min Backlight: When **Eco sensor** is **On**, the minimum screen brightness can be adjusted manually.

 If **Eco Sensor** is **On**, the display brightness may change (become slightly darker in most cases) depending on the surrounding light intensity.

- **No Signal Power Off (Off / 15 min. / 30 min. / 60 min.):** Sets how quickly the TV switches to standby mode, if no picture is being received.
 Disabled when the PC is in power saving mode.
- **Auto Power Off (Off / On):** The TV will be automatically turned off when no user operation is received for 4 hours.

Other Features

 MENU  → **System** → ENTER 

■ **Menu Language**

Set the menu language.

1. Select **Menu Language** and press the **ENTER**  button.
2. Choose desired language and press the **ENTER**  button.
 -  Choose between **English**, **Português** and **Español**.

■ Caption

(On-Screen Text Messages)

- **Caption (Off / On):** You can switch the caption function on or off. If captions are not available, they will not be displayed on the screen.

 The Caption feature does not work in Component, HDMI or PC modes.

- **Caption Mode:** You can select the desired caption mode.

 The availability of captions depends on the program being broadcasted.

CC1~CC4 / Text1~Text4: (analog channels only) The Analog Caption function operates in either analog TV channel mode or when a signal is supplied from an external device to the TV. (Depending on the broadcasting signal, the Analog Caption function may or may not work with digital channels.)

■ Auto Protection Time

- **Auto Protection Time (Off / 2 hours / 4 hours / 8 hours / 10 hours):** If the screen remains idle with a still image for a certain period of time defined by the user, the screen saver is activated to prevent the formation of ghost images on the screen.

■ General

- **Game Mode (Off / On):** When connecting to a game console such as PlayStation™ or Xbox™, you can enjoy a more realistic gaming experience selecting the game menu.



NOTE

- Precautions and limitations for game mode
 - To disconnect the game console and connect another external device, set **Game Mode** to **Off** in the setup menu.
 - If you display the TV menu in **Game Mode**, the screen shakes slightly.

- **Game Mode** is not available when the input source is set to TV or PC.
- After connecting the game console, set **Game Mode** to **On**. Unfortunately, you may notice reduced picture quality.
- If **Game Mode** is **On**:
 - **Picture Mode** is set to **Standard** and **Sound Mode** is set to **Movie**.

- **Menu Transparency (Bright / Dark)**: Set the Transparency of the menu.
- **Boot Logo (Off / On)**: Display Samsung logo when the TV is turned on.
- **AV Color System (Auto / PAL-M / PAL-N / NTSC)**: Normally the TV can receive image and sound with good quality when in the mode **Auto**. This mode detects the signal color system automatically. In case of some signal reception with color unsatisfactory, select the **AV Color System** Mode to **PAL-M, PAL-N** or **NTSC**.
- **TV name** **for LCD 550 series**: Make changes the **TV name**.
 If you select **User Input**, you can make TV name manually.

■ Anynet+(HDMI-CEC)

For details on set up options, refer to the “[Anynet+\(HDMI-CEC\)](#)” instructions.



■ DivX® Video On Demand

Shows the registration code authorized for the TV. If you connect to the DivX web site and register, you can download the VOD registration file. If you play the VOD registration using **My Contents**, the registration is completed.

 For more information on DivX® VOD, visit “<http://vod.divx.com>”.

■ Network Remote Control (On / Off) for LCD 550 series

Turn on/off or give permission to Samsung mobile phones devices.

You must have a Samsung Mobile phone/device which supports **Network Remote Control**. For more details, refer to each device's manual.



Support Menu

 MENU  → **Support** → ENTER 

e-Manual

You can read the introduction and instructions about the TV features stored in your TV.

 For the detailed information about e-Manual Screen, refer to “How to view the e-Manual” in User Manual.

■ Self Diagnosis

- **Picture Test (Yes / No):** Use to check for picture problems. If the problem continues to occur, check the Color pattern.

Yes: If the test picture does not appear or there is noise in the test picture, select Yes. There may be a problem with the TV. Contact Samsung's Call Center for assistance.

No: If the test picture is properly displayed, select No. There may be a problem with your external equipment. Please check your connections. If the problem persists, refer to the external device's user manual.

- **Sound Test (Yes / No):** Use the built-in melody sound to check for sound problems.
 -  If you hear no sound from the TV's speakers, before performing the sound test, make sure **Speaker Select** is set to **TV Speaker** in the **Sound** menu.
 -  The melody will be heard during the test even if **Speaker Select** is set to **External Speaker** or the sound is muted by pressing the **MUTE** button.

Yes: If you can hear sound only from one speaker or not at all during the sound test, select Yes. There may be a problem with the TV. Contact Samsung's Call Center for assistance.

No: If you can hear sound from the speakers, select No. There may be a problem with your external equipment. Please check your connections. If the problem persists, refer to the external device's user manual.


- **Signal Information:** (digital channels only) An HD channel's reception quality is either perfect or the channels are unavailable. Adjust your antenna to increase signal strength.
- **Troubleshooting:** If the TV seems to have a problem, refer to this description.
 -  If none of these troubleshooting tips apply, contact the Samsung customer service center.

Software Upgrade

Software Upgrade can be performed by downloading the latest firmware from “www.samsung.com”, to a USB memory device.

Current Version-the software already installed in the TV.

 Software is represented as ‘Year/ Month/Day_Version’.

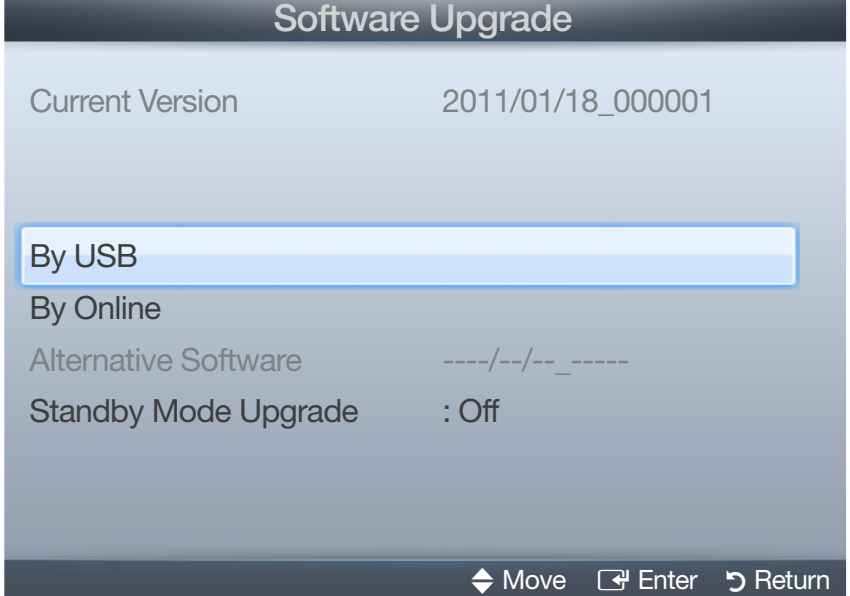

The screenshot shows the 'Software Upgrade' menu on a Samsung TV. The menu has a dark blue header with the title 'Software Upgrade'. Below the header, the 'Current Version' is displayed as '2011/01/18_000001'. There are two main options: 'By USB' and 'By Online'. 'By USB' is highlighted with a light blue selection bar. Below these options, there are two more settings: 'Alternative Software' with a value of '----/--/--_-----' and 'Standby Mode Upgrade' set to ': Off'. At the bottom of the screen, there is a navigation bar with three buttons: 'Move' (with a diamond icon), 'Enter' (with a right arrow icon), and 'Return' (with a circular arrow icon).


Software Upgrade	
Current Version	2011/01/18_000001
By USB	
By Online	
Alternative Software	----/--/--_-----
Standby Mode Upgrade	: Off

◀ Move ▶ Enter ↻ Return

* It may differ depending on the model.

Installing the Latest Version

- **By USB:** Insert a USB drive containing the firmware upgrade file, downloaded from www.samsung.com, into the TV. Please be careful not to disconnect the power or remove the USB drive until upgrades are complete. The TV will be turned off and on automatically after completing the firmware upgrade. When software is upgraded, video and audio settings you have made will return to their default settings. We advise you to write down your settings so that you can easily reset them after the upgrade.

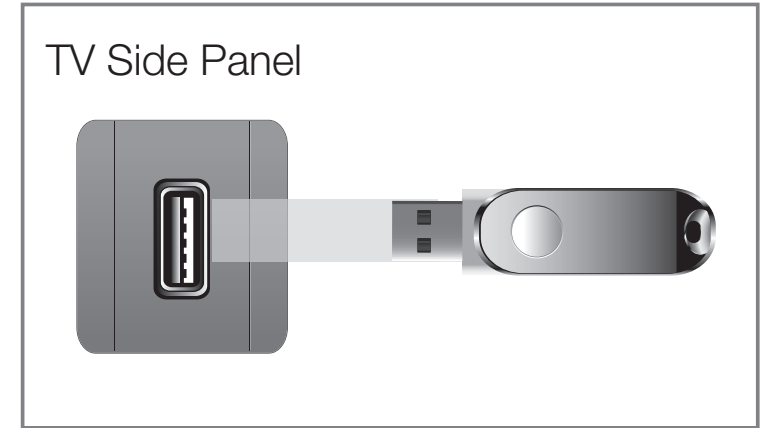

* It may differ depending on the model.

- **By Online** **for LCD 550 series**: Upgrade the software using the Internet.
 -  First, configure your network. For detailed procedures on using the Network Setup, refer to the “Network Connection” instructions.
 -  If the Internet connection does not operate properly, the connection may be broken. Please retry downloading. If the problem persists, download by USB and upgrade.
- **Alternative Software** (backup): Displays the Software version downloaded through **By Online**. During the software upgrading, When the Upgrade will discontinue from last step, this function be activated.

- **Standby Mode Upgrade(Off / On)** for LCD 550 series: A manual upgrade will be automatically performed at selected time. Since the power of the unit is turned on internally, the screen may be turned on slightly for the LCD product. This phenomenon may continue for more than 1 hour until the software upgrade is complete.

■ **Contact Samsung**

View this information when your TV does not work properly or when you want to upgrade the software. You can find information regarding our call centers, and how to download products and software.

■ **Contents Home**


You can enjoy useful and various contents.



❑ Using the My Contents


Enjoy photos, music and movie files saved on a USB Mass Storage Class (MSC) device and your PC.

1. Press the **CONTENT** button to select **My Contents**.
2. Press **▲/▼** button to select desired menu (**Videos**, **Photos**, **Music**), then press the **ENTER**  button.

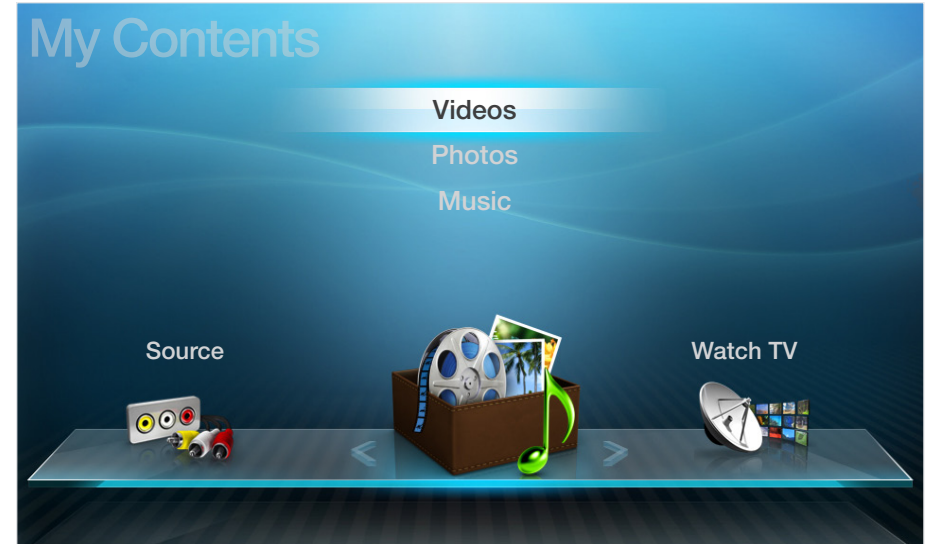

❑ Connecting a USB Device

1. Turn on your TV.
2. Connect a USB device containing photo, music and movie files to the **USB** jack on the side of the TV.
3. When USB is connected to the TV, popup window appears. Then you can select **Connected Device**.

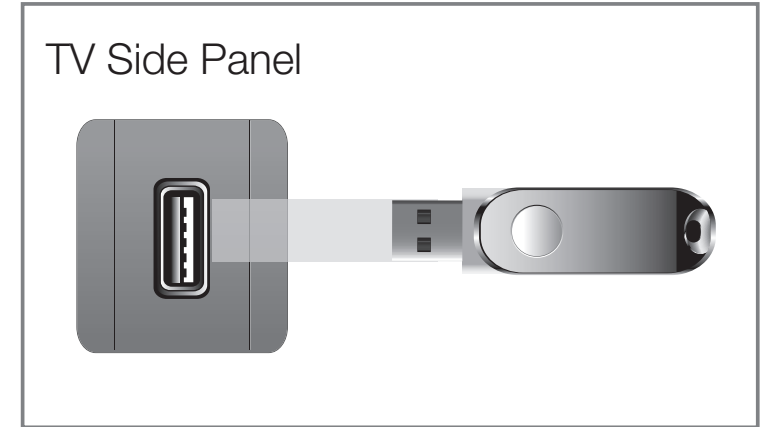

* It may differ depending on the model.

-  It might not work properly with unlicensed multimedia files.
-  Need-to-Know List before using **My Contents**
 - MTP (Media Transfer Protocol) is not supported.
 - The file system supports FAT16, FAT32 and NTFS.
 - Certain types of USB Digital camera and audio devices may not be compatible with this TV.
 - **My Contents** only supports USB Mass Storage Class (MSC) devices. MSC is a Mass Storage Class Bulk-Only Transport device. Examples of MSC are Thumb drives, Flash Card Readers and USB HDD (USB HUB are not supported). Devices should be connected directly to the TV's USB port.
 - Before connecting your device to the TV, please back up your files to prevent them from damage or loss of data. SAMSUNG is not responsible for any data file damage or data loss.

- USB (HDD) is not supported. **for LCD 450 series**
- Connect a USB HDD to the dedicated port, USB 1 (HDD) port. **for LCD 550 series**
- Do not disconnect the USB device while it is loading.
- The higher the resolution of the image, the longer it takes to display on the screen.
- The maximum supported JPEG resolution is 15360 x 8640 pixels.
- For unsupported or corrupted files, the “Not Supported File Format” message is displayed.
- If the files are sorted by **Folder View**, up to 1000 files can be displayed in each folder.

- MP3 files with DRM that have been downloaded from a non-free site cannot be played. Digital Rights Management (DRM) is a technology that supports the creation, distribution and management of the content in an integrated and comprehensive way, including the protection of the rights and interests of the content providers, the prevention of the illegal copying of contents, as well as managing billings and settlements.
- If more than 2 PTP devices are connected, you can only use one at a time.
- If more than two MSC devices are connected, some of them may not be recognized. A USB device that requires high power (more than 500mA or 5V) may not be supported.
- If an over-power warning message is displayed while you are connecting or using a USB device, the device may not be recognized or may malfunction.

- If the TV has no input during time set in **Auto Protection Time**, the Screensaver will run.
- The power-saving mode of some external hard disk drives may be released automatically when connected to the TV.
- If a USB extension cable is used, the USB device may not be recognized or the files on the device may not be read.
- If a USB device connected to the TV is not recognized, the list of files on the device is corrupted or a file in the list is not played, connect the USB device to the PC, format the device and check the connection.
- If a file deleted from the PC is still found when **My Contents** is run, use the “Empty the Recycle Bin” function on the PC to permanently delete the file.
- **My Contents** only supports sequential jpeg format.
- The scene search and thumbnail functions are not supported in the **Videos**.
- If the number of files and folders saved on a USB storage device is approximately over 4000, the files and folders may not appear and some folders may not be opened.

Connecting to the PC through network for LCD 550 series

You can play pictures, music and videos saved on your PC through a network connection in the **My Contents** mode over your TV.

 If you want to use **My Contents** to play files saved on your PC over your TV, you should download “AllShare PC Software” and users manual from “www.samsung.com”.

1. For more information on how to configure your network, refer to ‘Network Connection’.
 - You are recommended to locate both TV and PC in same subnet. The first three parts of the IP address of the TV and PC should be the same and only the last part (the host address) should be changed. (e.g. IP Address: 123.456.789.**)

2. Using a LAN cable, connect between the external modem and the PC onto which the AllShare PC Software program will be installed.
 - You can connect the TV to the PC directly without connecting it through a Sharer (Router).

 Functions that are not supported when connecting to a PC through a network:

- The **Background Music** and **Background Music Setting** functions.
- The  (REW) or  (FF) button while a movie is playing.

 The DivX DRM, Multi-audio, embedded caption does not supported.

 AllShare PC Software should be permitted by the firewall program on your PC.



When you use **My Contents** mode through a network connection, according to functions of the provided server:

- The sorting method may vary.
- The **Resume Play** function, which resumes playing of a video, may not be supported.
 - The **Resume Play** function does not support multiple users. (It will have only memorized the point where the most recent user stopped playing.)
- The ◀◀ (REW), ▶▶ (FF) or ⏸ (Pause) buttons may not work depending on the content information.




If you experience any file stuttering issue while playing a video over a wireless network, we recommend using a wired network.

❑ Screen Display

Move to the desired file using the ◀/▶/▲/▼ buttons and then press the **ENTER** ⏎ or ▶ (Play) button. The file is played. **My Contents** screen may differ depending on the way to enter the screen.

Information:

You can ascertain the selected device name, contents mode, folder/file name, page and sorting list.

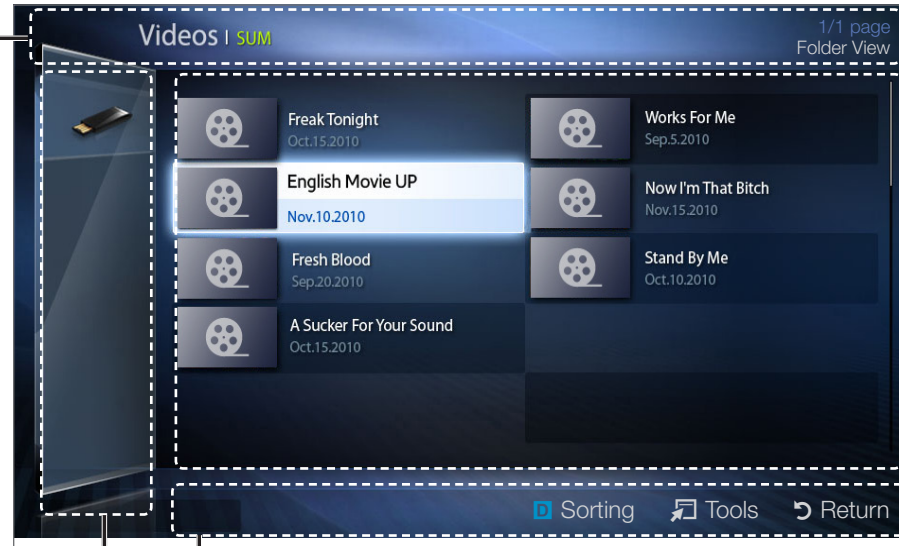

File List Section:

You can confirm the files and groups that are sorted by category.

Contents mode / Device name:

You can select the desired Contents mode or Device name.

Operation Buttons:

- **Yellow** (**Edit Mode**); Selects the desired music. The check box is shown in the screen to check the music you want. It is only available in Music.
- **Blue** (**Sorting**); Selects the sort list.
- **Page**; Move to next or previous page.
- **Tools**; Displays the option menu.
- **Return**; Move to the previous step.

Videos

Playing Video

1. Press the ◀/▶/▲/▼ button to select the desired video in the file list.
2. Press the **ENTER**  button or  (Play) button.
 - The selected file name is displayed on the top with its playing time.
 - If video time information is unknown, play time and progress bar are not displayed.



- During video playback, you can search using ◀ and ▶ button.
- You can use (◀◀) (REW) and (▶▶) (FF) buttons during playback.

 In this mode, you can enjoy movie clips contained on a Game, but you cannot play the Game itself.

- Supported Subtitle Formats

Name	File extension	Format
MPEG-4 time-based text	.ttxt	XML
SAMI	.smi	HTML
SubRip	.srt	string-based
SubViewer	.sub	string-based
Micro DVD	.sub or .txt	string-based

● Supported Video Formats

File Extention	Container	Video Codec	Resolution	Frame rate (fps)	Bit rate (Mbps)	Audio Codec
*.avi *.mkv	AVI MKV	DivX 3.11 / 4.x / 5.1 / 6.0	1920x1080	6 ~ 30	8	MP3 / AC3 / LPCM / ADPCM / DTS Core
		H.264 BP / MP / HP	1920x1080	6 ~ 30	25	
		MPEG4 SP / ASP	1920x1080	6 ~ 30	8	
		Motion JPEG	640x480	6 ~ 30	8	



File Extention	Container	Video Codec	Resolution	Frame rate (fps)	Bit rate (Mbps)	Audio Codec
*.asf	ASF	DivX 3.11	1920x1080	6 ~ 30	8	MP3 / AC3 / LPCM / ADPCM / WMA
		4.x/5.1/6.0	1920x1080	6 ~ 30	8	
		H.264 BP / MP / HP	1920x1080	6 ~ 30	25	
		MPEG4 SP / ASP	1920x1080	6 ~ 30	8	
		Motion JPEG	640x480	6 ~ 30	8	
*.wmv	ASF	Window Media Video v9	1920x1080	6 ~ 30	25	WMA

File Extention	Container	Video Codec	Resolution	Frame rate (fps)	Bit rate (Mbps)	Audio Codec
*.mp4	MP4	H.264 BP / MP / HP	1920x1080	6 ~ 30	25	MP3 / ADPCM / AAC
		MPEG4 SP / ASP	1920x1080	6 ~ 30	8	
*.3gp	3GPP	H.264 BP / MP / HP	1920x1080	6 ~ 30	25	ADPCM / AAC / HE-AAC
		MPEG4 SP / ASP	1920x1080	6 ~ 30	8	
*.vro	VRO VOB	MPEG1	1920x1080	24 / 25 / 30	30	AC3 / MPEG / LPCM
		MPEG2	1920x1080	24 / 25 / 30	30	

File Extention	Container	Video Codec	Resolution	Frame rate (fps)	Bit rate (Mbps)	Audio Codec
*.mpg *.mpeg	PS	MPEG1	1920x1080	24 / 25 / 30	30	AC3 / MPEG / LPCM / AAC
		MPEG2	1920x1080	24 / 25 / 30	30	
		H.264	1920x1080	6 ~ 30	25	
*.ts *.tp *.trp	TS	MPEG2	1920x1080	24 / 25 / 30	30	AC3 / AAC / MP3 / DD+ / HE-AAC
		H.264	1920x1080	6 ~ 30	25	
		VC1	1920x1080	6 ~ 30	25	

Other Restrictions



NOTE

- Video content will not play, or not play correctly, if there is an error in the content or the container.
- Sound or video may not work if the contents have a standard bit rate/frame rate above the compatible Frame/sec listed in the table above.
- If the Index Table is in error, the Seek (Jump) function is not supported.
- When playing the video through network, it may not work depending on the network status. When you play video over a network connection, the video may not be played smoothly. **for LCD 550 series**
- The menu can be displayed late if the video is over 10Mbps(bit rate).

- Some USB/digital camera devices may not be compatible with the player.
- Video content can not be played, if there are many contents in one file.

Video Decoder	Audio Decoder
● Supports up to H.264, Level 4.1 ● H.264 FMO / ASO / RS, VC1 SP / MP / AP L4 and AVCHD are not supported. ● MPEG4 SP, ASP : – Below 1280 x 720: 60 frame max – Above 1280 x 720: 30 frame max ● GMC is not supported.	● Supports up to WMA 7, 8, 9 STD, 9 PRO ● WMA Lossless, Voice Lossless, Voice is not supported. ● WMA sampling rate 22050Hz mono is not supported.

Playing movie continuously (Resume Play)

If you exit the playing movie function, the movie can be played later from the point where it was stopped.


1. Select the movie file you want to play continuously by pressing the ◀ or ▶ button to select it from the file list section.
 2. Press the ▶ (Play) / **ENTER** ↵ button.
 3. Select **Resume Play** by pressing the **D** button. The Movie will begin to play from where it was stopped.
- ✍ The **D** button is available when resuming play.



Music

Playing Music

1. Press the ◀/▶/▲/▼ button to select the desired Music in the file list.
2. Press the **ENTER** ↵ button or ▶ (Play) button.
 - You can use ◀◀ (REW) and ▶▶ (FF) buttons during playback.

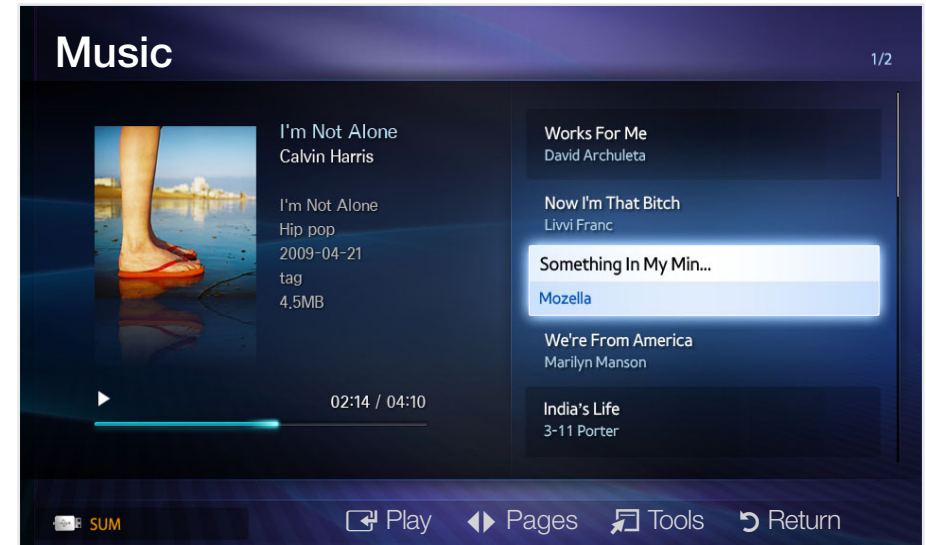

-  Only displays the files with MP3 file extension. Other file extensions are not displayed, even if they are saved on the same USB device.
-  If the sound is abnormal when playing MP3 files, adjust the **Equalizer** in the **Sound** menu. (An over-modulated MP3 file may cause a sound problem.)


Playing selected music

1. Press the  (**Edit Mode**) button.
2. Select the desired music.
 -  The check box appears to the left of the selected files.
3. Press the **TOOLS** button and select **Play Selected Contents**.
 -  You can select or deselect all music pressing the **Select All/Deselect All**.

Photos

Viewing a Photo (or Slide Show)

1. Press the ◀/▶/▲/▼ button to select the desired photo in the file list.
 2. Press the **ENTER** ↵ button.
 - When a selected photo is displayed, press the **ENTER** ↵ button to start the slide show.
 - During the slide show, all files in the file list will be displayed in order.
- ✎ When you press the ▶ (Play) button in the file list, slide show will be started immediately.

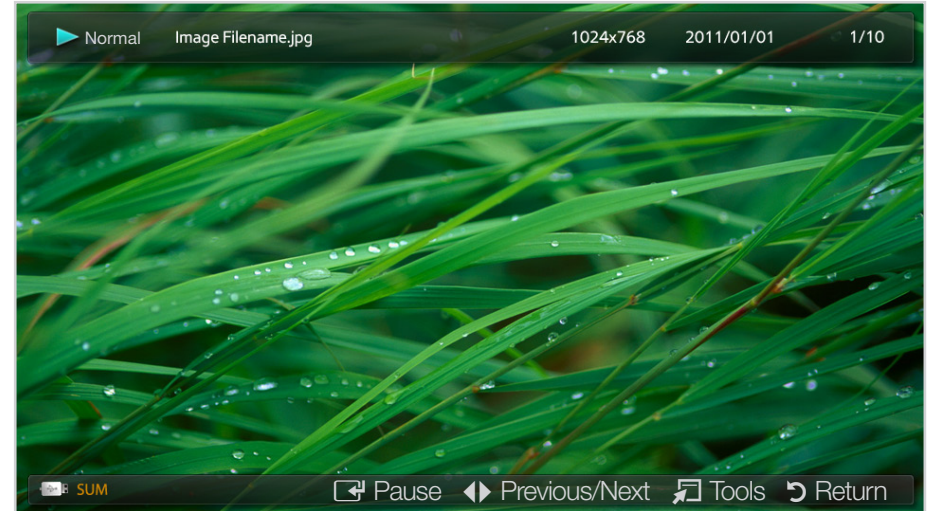

 Music files can be automatically played during the Slide Show if the **Background Music** is set to **On**.

My Contents - Additional Functions

Sorting the file list

Press the **D** button in the file list to sort the files.

Category	Operation	Videos	Music	Photos
Folder View	Displays the whole folder. You can view the photo by selecting the folder.	✓	✓	✓
Title Search	Sorts and displays the file title in Alphabet/Number/Symbol order.	✓	✓	✓
Latest Date	Sorts and shows files by the latest date.	✓		✓
Earliest Date	Sorts and shows files by the earliest date.	✓		✓

Category	Operation	Videos	Music	Photos
Artist	Sorts the music file by artist in alphabetical order.		✓	
Album	Sorts the music file by album in alphabetical order.		✓	
Genre	Sorts music files by the genre.		✓	
Monthly	Sorts and shows photo files by month.			✓

Videos/Music/Photos Play Option menu

During playing a file, press the **TOOLS** button.

Category	Operation	Videos	Music	Photos
Title Search	You can move the other file directly.	✓		
Time Search	You can search the video using ◀ and ▶ button at one minute interval or entering the number directly.	✓		
Shuffle Mode	You can play the music randomly.		✓	
Repeat Mode	You can play movie and music files repeatedly.	✓	✓	



Category	Operation	Videos	Music	Photos
Picture Size	You can adjust the picture size to your preference.	✓		
Picture Mode	You can adjust the picture setting.	✓		✓
Sound Mode	You can adjust the sound setting.	✓	✓	✓
Subtitle Language	You can enjoy video in one of supported languages as required. The function is only enabled when stream-type files which support multiple audio formats are played.	✓		



Category	Operation	Videos	Music	Photos
Subtitle Setting	You can play the video with Subtitles. This function only works if the subtitles are the same file name as the video.	✓		
Start Slide Show / Pause Slide Show	You can start or pause a Slide Show.			✓
Slide Show Speed	You can select the slide show speed during the slide show.			✓
Background Music	You can turn background music on and off when watching a slide show.			✓

Category	Operation	Videos	Music	Photos
Background Music Setting	You can select background music when watching a Slide Show.			✓
Zoom	You can zoom into images in full screen mode.			✓
Rotate	You can rotate images in full screen mode.			✓
Information	You can see detailed information about the played file.	✓	✓	✓

What is Anynet+? **TOOLS**

Anynet+ is a function that enables you to control all connected Samsung devices that support Anynet+ with your Samsung TV's remote control. The Anynet+ system can be used only with Samsung devices that have the Anynet+ feature. To be sure your Samsung device has this feature, check if there is an Anynet+ logo on it.

NOTE

- Connect the Optical cable between the DIGITAL AUDIO OUT (OPTICAL) jack on your TV and the Digital Audio Input on the Home Theater.
- When following the connection above, the Optical jack only outputs 2 channel audio. You will only hear sound from the Home Theater's Front, Left and Right speakers and the subwoofer. If you want to hear 5.1 channel audio, connect the DIGITAL AUDIO OUT (OPTICAL) jack on the DVD / Satellite Box (i.e. Anynet Device 1 or 2) directly to the Amplifier or Home Theater, not the TV.

- Only one Home Theater can be connected.
- You can connect an Anynet+ device using the HDMI cable. Some HDMI cables may not support Anynet+ functions.
- Anynet+ works when the AV device supporting Anynet+ is in the standby or on status.
- Anynet+ supports up to 12 AV devices in total. Note that you can connect up to 3 devices of the same type.

Anynet+ Menu

The Anynet+ menu changes depending on the type and status of the Anynet+ devices connected to the TV.

Anynet+ Menu	Description
View TV	Changes Anynet+ mode to TV broadcast mode.
Device List	Shows the Anynet+ device list.
(device_name) MENU	Shows the connected device menus. E.g. If a DVD recorder is connected, the disc menu of the DVD recorder will appear.
(device_name) Tools	Shows the play menu of the connected device. E.g. If a DVD recorder is connected, the play menu of the DVD recorder will appear.

Anynet+ Menu	Description
(device_name) Title Menu	Shows the title menu of the connected device. E.g. If a DVD recorder is connected, the title menu of the DVD recorder will appear. - Depending on the device, this menu may not be available.
Receiver	Sound is played through the receiver.

❏ Setting Up Anynet+

 MENU  → System → Anynet+ (HDMI-CEC) → ENTER 

■ Anynet+ (HDMI-CEC)

Anynet+ (HDMI-CEC) (Off / On): To use the Anynet+ Function, **Anynet+ (HDMI-CEC)** must be set to **On**.

 When the **Anynet+ (HDMI-CEC)** function is disabled, all the Anynet+ related operations are deactivated.

Auto Turn Off (No / Yes): Setting an Anynet+ Device to turn off automatically when the TV is turned off.

 If **Auto Turn Off** is set to **Yes**, running external devices will turn off at the same time as the TV powers off.

 May not be enabled depending on the device.

❑ Switching between Anynet+ Devices

1. Press the **TOOLS** button, then select **Anynet+ (HDMI-CEC)**.
2. Anynet+ devices connected to the TV are listed in **Device List**.
 - 📝 If you cannot find a device you want, press the **A** button to refresh the list.
3. Select a device and press the **ENTER**  button. You can switch to the selected device.
 - 📝 Only when you set **Anynet+ (HDMI-CEC)** to **On** in the **System** menu, the **Device List** menu appears.
 - Switching to the selected device may take up to 2 minutes. You cannot cancel the operation during the switching operation.
 - If you have selected external input mode by pressing the **SOURCE** button, you cannot use the Anynet+ function. Make sure to switch to an Anynet+ device by using the **Device List**.

Listening through a Receiver

You can listen through a receiver (i.e Home Theater) instead of the TV speaker.

1. Select **Receiver** and set to **On**.

2. Press the **EXIT** button to exit.

-  If your receiver supports audio only, it may not appear in the device list.
-  The receiver will work when you have properly connected the optical in jack of the receiver to the DIGITAL AUDIO OUT (OPTICAL) jack of the TV.
-  When the receiver (i.e Home Theater) is set to **On**, you can hear sound output from the TV's Optical jack. When the TV is displaying a DTV (air) signal, the TV will send out 5.1 channel sound to the receiver. When the source is a digital component such as a DVD and is connected to the TV via HDMI, only 2 channel sound will be heard from the receiver.



NOTE

- You can only control Anynet+ devices using the TV remote control, not the buttons on the TV.
- The TV remote control may not work under certain conditions. If this occurs, reselect the Anynet+ device.
- The Anynet+ functions do not operate with other manufacturers' products.



❏ Troubleshooting for Anynet+

Problem	Possible Solution
Anynet+ does not work.	● Check if the device is an Anynet+ device. The Anynet+ system supports Anynet+ devices only. ● Only one receiver (home theater) can be connected. ● Check if the Anynet+ device power cord is properly connected. ● Check the Anynet+ device's Video/Audio/HDMI cable connections. ● Check whether Anynet+ (HDMI-CEC) is set to On in the System menu.

Problem	Possible Solution
Anynet+ does not work.	● Check whether the TV remote control is in TV mode. ● Check whether the remote control is Anynet+ compatible. ● Anynet+ does not work in certain situations. (Searching channels, operating My Contents or Plug & Play (initial setup), etc.) ● When connecting or removing the HDMI cable, please make sure to search devices again or turn your TV off and on again. ● Check if the Anynet+ Function of Anynet+ device is set on.

Problem	Possible Solution
I want to start Anynet+.	● Check if the Anynet+ device is properly connected to the TV and check if the Anynet+ (HDMI-CEC) is set to On in the System menu. ● Press the TOOLS button to display the Anynet+ menu and select a menu you want.
I want to exit Anynet+.	● Select View TV in the Anynet+ menu. ● Press the SOURCE button on the TV remote control and select a device other than Anynet+ devices. ● Press ▼ CH ▲ to change the TV mode. (Note that the channel button operates only when a tuner-embedded Anynet+ device is not connected.)

Problem	Possible Solution
The message ‘Connecting to Anynet+ device...’ appears on the screen.	• You cannot use the remote control when you are configuring Anynet+ or switching to a view mode. • Use the remote control when the Anynet+ setting or switching to view mode is complete.
The Anynet+ device does not play.	• You cannot use the play function when Plug & Play (initial setup) is in progress.

Problem	Possible Solution
The connected device is not displayed.	● Check whether or not the device supports Anynet+ functions. ● Check whether or not the HDMI cable is properly connected. ● Check whether Anynet+ (HDMI-CEC) is set to On in the System menu. ● Search Anynet+ devices again. ● You can connect an Anynet+ device using the HDMI cable only. Some HDMI cables may not support Anynet+ functions. ● If it is terminated by an abnormal situation such as disconnecting the HDMI cable or power cord or a power failure, please repeat the device scan.
The TV sound is not output through the receiver.	● Connect the optical cable between TV and the receiver.

About AllShare™ for LCD 550 series

AllShare™ connects your TV and compatible Samsung mobile phones / devices through a network. You can play media contents including videos, photos and music saved on your mobile phones or the other devices (such as your PC) by controlling them on the TV via the network.

-  For more information, visit “www.samsung.com” or contact the Samsung call center. Mobile devices may need additional software installation. For details, refer to each device’s user’s guide.
-  If your Samsung TV connects to a non-Samsung DLNA server, a compatibility issue may occur during video playback.



By connecting your Samsung TV to a network via AllShare™, you can use Samsung's original functions as follows:

- Playback of various video formats (DivX, MP4, 3GPP, AVI, ASF, MKV, etc.)
- Video thumbnail feature
- Bookmark function (to resume video playback)
- Auto-chaptering (scene navigation)
- Digital content management
- Compatibility with various subtitle formats (SRT, SMI, SUB, TXT, TTXT)
- Search with file names
- And many others




To use the original DLNA functions of Samsung fully, it is recommended that you use the AllShare™ software provided with your TV.

❏ Setting Up AllShare™

👉 MENU [] → Network → AllShare Settings → ENTER [↵]

■ AllShare Settings

- **Media (On / Off):** Enables or disables the media function. When the media function is on, Media contents play can be controlled by mobile phones or other devices that support DLNA DMC.

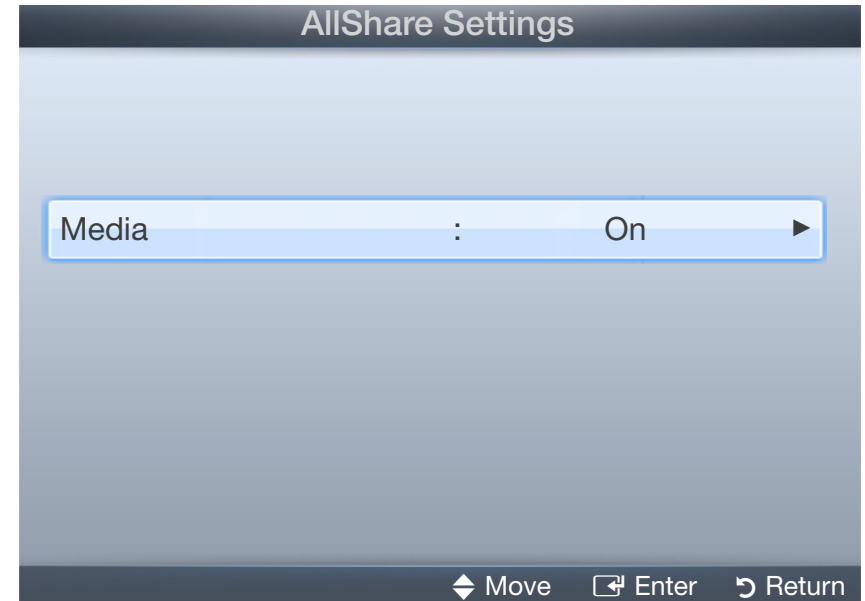

■ Media

Shows a list of mobile phones or connected devices which have been set up with this TV for using the **Media** function.

 The **Media** function is available in all devices which support DLNA DMC.

- **Allow / Deny**: Allows/Blocks the devices.
- **A Delete**: Deletes the devices from the list.

 This function only deletes the name of the devices from the list. If the deleted device is turned on or tries to connect to the TV, it may appear on the list again.

Using the Media Function

You can play media contents including videos, photos and music saved on your mobile phones or the other devices (such as your PC) by controlling them on the TV via the network.

NOTE

- To turn off the media contents transmission from the devices, set **Media** to **Off** in the **AllShare Settings**.
- Contents may not be played on your TV depending on their resolution and format.
- The **ENTER**  and ◀ / ▶ buttons may not work depending on the type of media content.
- Using the devices, you can control the media playing. For details, refer to each device's user's guide.

❑ Troubleshooting

If the TV seems to have a problem, first try this list of possible problems and solutions. If none of these troubleshooting tips apply, visit samsung.com, then click on Support, or call Samsung customer service.

Issues	Solutions and Explanations
Poor picture	First of all, please perform the Picture Test and confirm that your TV is properly displaying the test image. ● go to MENU - Support - Self Diagnosis - Picture Test If the test image is properly displayed, the poor picture may be caused by the source or signal.

Issues	Solutions and Explanations
The TV image does not look as good as it did in the store.	● If you have an analog Cable/Set top box, upgrade to a digital set top box. Use HDMI or Component cables to deliver HD (high definition) picture quality. ● Cable/Satellite subscribers: Try HD stations from the channel line up. ● Air/Cable Antenna connection: Try HD stations after performing Auto program.  Many HD channels are up scaled from SD(Standard Definition) contents. ● Adjust the Cable/Set top box video output resolution to 1080i or 720p.

Issues	Solutions and Explanations
The picture is distorted: macroblock error, small block, dots, pixelization.	● Compression of video contents may cause picture distortion, especially in fast moving pictures such as sports and action movies. ● Low signal level can cause picture distortion. This is not a TV problem. ● Mobile phones used close to the TV (up to 3.3 ft) may cause noise in picture on analog and digital TV.
Color is wrong or missing.	● If you're using component connection, make sure the component cables are connected to the correct jacks. Incorrect or loose connections may cause color problems or a blank screen.

Issues	Solutions and Explanations
There is poor color or brightness.	● Adjust the Picture options in the TV menu. (go to Picture Mode / Color / Brightness / Sharpness) ● Adjust Energy Saving option in the TV menu (go to MENU - System - Eco Solution - Energy Saving) ● Try resetting the picture to view the default picture setting. (go to MENU - Picture - Reset Picture)
There is a dotted line on the edge of the screen.	● If the picture size is set to Screen Fit, change it to 16:9. ● Change cable/Set top box resolution.

Issues	Solutions and Explanations
The picture is black and white.	● If you are using an AV composite input, connect the video cable (yellow) to the Green jack of component input 1 on the TV.
When changing channels, the picture freezes or is distorted or delayed.	● If connected to a cable box, please try to reset it. (reconnect the AC cord and wait until the cable box reboots. It may take up to 20 minutes) ● Set output resolution of the cable box to 1080i or 720p.

Issues	Solutions and Explanations
Sound Problem	First of all, please perform the Sound Test to confirm that your TV audio is properly operating. ● go to MENU - Support - Self Diagnosis - Sound Test If the audio is OK, the sound problem may caused by the source or signal.
There is no sound or the sound is too low at maximum volume.	● Please check the volume of the device (Cable/Sat Box, DVD, Blu-ray etc) connected to your TV.

Issues	Solutions and Explanations
The picture is good but there is no sound.	● Set the Speaker Select option to TV Speaker in the Sound menu. ● If you are using an external device, check the device's audio output option (ex. you may need to change your cable box's audio option to HDMI when you have a HDMI connected to your TV). ● If you are using a DVI to HDMI cable, a separate audio cable is required. ● Reboot the connected device by reconnecting the device's power cable.

Issues	Solutions and Explanations
The speakers are making an inappropriate noise.	● Check the cable connections. Make sure a video cable is not connected to an audio input. ● For Antenna or Cable connections, check the signal information. Low signal level may cause sound distortion. ● Perform the Sound Test as explained above.
No Picture, No Video	
The TV will not turn on.	● Make sure the AC power cord is securely plugged into the wall outlet and the TV. ● Make sure the wall outlet is working. ● Try pressing the POWER button on the TV to make sure the problem is not the remote control. If the TV turns on, refer to 'Remote control does not work' below.

Issues	Solutions and Explanations
The TV turns off automatically.	● Ensure the Sleep Timer is set to Off in the System menu. ● If your PC is connected to the TV, check your PC power settings. ● Make sure the AC power cord is plugged in securely to the wall outlet and the TV. ● When watching TV from an antenna or cable connection, the TV will turn off after 10 - 15 minutes if there is no signal.

Issues	Solutions and Explanations
There is no picture/ video	● Check cable connections. (remove and reconnect all cables connected to the TV and external devices). ● Set your external device's (Cable/Set top box, DVD, Blu-ray etc) video outputs to match the connections to the TV input. For example, if an external device's output is HDMI, it should be connected to an HDMI input on the TV. ● Make sure your connected devices are powered on. ● Be sure to select the TV's correct source by pressing the SOURCE button on the remote control. ● Reboot the connected device by reconnecting the device's power cable.



Issues	Solutions and Explanations
RF(Cable/Antenna) Connection	
The TV is not receiving all channels.	● Make sure the coaxial cable is connected securely. ● Please try Auto Program to add available channels to the channel list. go to MENU - Channel - Auto Program then select Auto and make sure the correct Cable TV signal type is set in the menu. ● Verify the Antenna is positioned correctly.
No Caption on digital channels.	Check Caption Setup menu. Some channels may not have caption data.

Issues	Solutions and Explanations
The picture is distorted: macroblock, error, small block, dots, pixelization.	● Compression of video contents may cause picture distortion. especially on fast moving pictures such as sports and action movies. ● A low signal can cause picture distortion. This is not a TV problem.
PC Connection	
A “Mode Not Supported” message appears.	● Set your PC’s output resolution so it matches the resolutions supported by the TV.
“PC” is always shown on the source list, even if a PC is not connected.	● This is normal; “PC” is always shown on the source list, regardless of whether a PC is connected.

Issues	Solutions and Explanations
The video is OK but there is no audio.	● If you are using a HDMI connection, check the audio output setting on your PC.
Network Connection for LCD 550 series	
The wireless network connection failed.	● Samsung Wireless USB dongle is required to use a wireless network. ● Make sure the network connection is set to Wireless. ● Make sure the TV is connected to a wireless IP sharer (Router).
Software Upgrade over the network fails.	● Try Network Settings in Network menu. ● If you have latest SW version, SW upgrade will not proceed.

Issues	Solutions and Explanations
Others	
Purple/green rolling horizontal bars and buzzing noise from the TV speakers with Component cable connection.	● Remove the left and right audio connections from the set-top-box. If the buzzing stops, this indicates that the set-top-box has a grounding issue. Replace the Component video cables with an HDMI connection.
The picture will not display in full screen.	● HD channels will have black bars on either side of the screen when displaying up scaled SD (4:3) contents. ● Black bars on Top & Bottom will be shown on movies that have aspect ratios different from your TV. ● Adjust picture size option on your external device or TV to full screen.

Issues	Solutions and Explanations
The remote control does not work.	● Replace the remote control batteries with correct polarity (+/–). ● Clean the transmission window located on the top of the remote control. ● Try pointing the remote control directly at the TV from 5~6 feet away.
The cable/set top box remote control does not turn the TV on or off, or adjust the volume.	● Program the Cable/Set top box remote control to the operate the TV. Refer to the Cable/Set top box user manual for SAMSUNG TV code.

Issues	Solutions and Explanations
A “ Mode Not Supported ” message appears.	● Check the supported resolution of the TV and adjust the external device’s output resolution accordingly. Refer to resolution settings in this manual.
Caption on TV menu is greyed out.	● Caption can not be selected in the TV menu when connected via HDMI or Component. ● Caption must be activated on the external device.
There is a plastic smell from the TV.	● This smell is normal and will dissipate over time.
TV Signal Information is unavailable in the Self Diagnosis Test menu.	● This function is only available with digital channels from an Antenna / RF / Coax connection.

Issues	Solutions and Explanations
TV is tilted to the right or left side.	● Remove the stand base from the TV and reassemble it.
The Channel menu is grey out (unavailable).	● The Channel menu is only available when the TV source is selected.
Your settings are lost after 30 minutes or every time the TV is turned off.	● If TV is in the Store Demo mode, it will reset audio and picture settings every 30 minutes. Please change from Store Demo mode to Home Use mode in the Plug & Play procedure. Press the SOURCE button to select TV mode, go to MENU → System → Plug & Play → ENTER .

Issues	Solutions and Explanations
You have intermittent loss of audio or video.	● Check the cable connections and reconnect them. ● Loss of audio or video can be caused by using overly rigid or thick cables. Make sure the cables are flexible enough for long term use. If mounting the TV to the wall, we recommend using cables with 90 degree connectors.
The PIP menu is not available.	● PIP functionality is only available when you are using a HDMI, PC or components source.

Issues	Solutions and Explanations
You see small particles when you look closely at the edge of the frame of the TV.	● This is part of the product's design and is not a defect.
POP (TV's internal banner ad) appears on the screen.	● Select Home Use under Plug & Play mode. For details, refer to Plug & Play (Initial Setup).

❑ Anti-theft Kensington Lock


The Kensington Lock is not supplied by Samsung. It is a device used to physically fix the system when using it in a public place. The appearance and locking method may differ from the illustration depending on the manufacturer. Refer to the manual provided with the Kensington Lock for additional information on proper use.

📖 Please find a “” icon on the rear of the TV. A kensington slot is beside the “” icon.

📖 The position and color may differ depending on the model.

To lock the product, follow these steps:

1. Wrap the Kensington lock cable around a large, stationary object such as desk or chair.

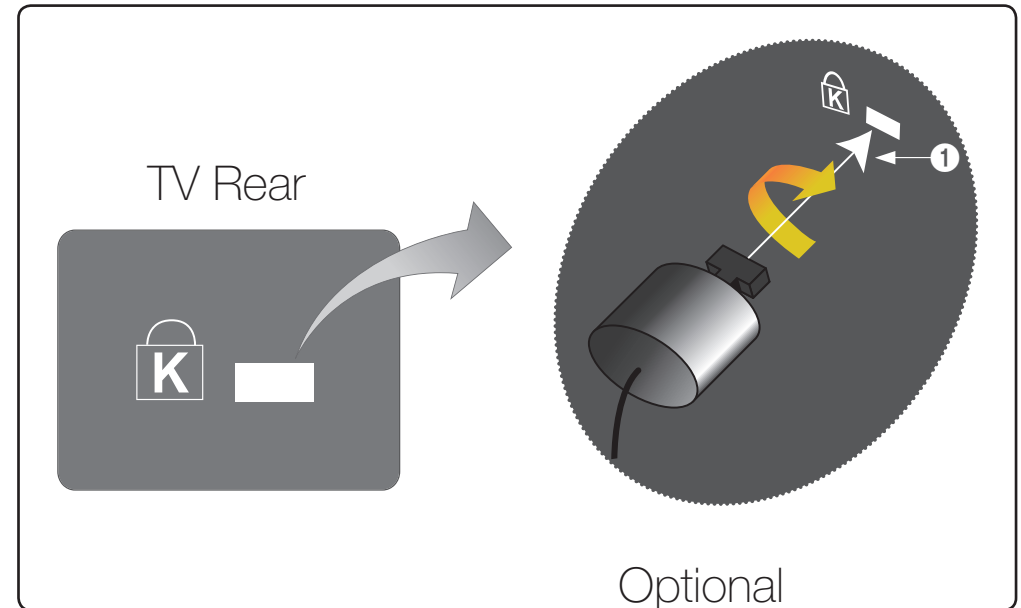

2. Slide the end of the cable with the lock attached through the looped end of the Kensington lock cable.
3. Insert the locking device into the Kensington slot on the product (1).
4. Lock the lock.



NOTE

- These are general instructions. For exact instructions, see the User manual supplied with the locking device.
- The locking device has to be purchased separately.
- The location of the Kensington slot may be different depending on the TV model.

□ License



TheaterSound, SRS and  symbol are trademarks of SRS Labs, Inc. TheaterSound technology is incorporated under license from SRS Labs, Inc.



Manufactured under license from Dolby Laboratories. Dolby and the double-D symbol are trademarks of Dolby Laboratories.



Manufactured under license under U.S. Patent #'s: 5,451,942; 5,956,674; 5,974,380; 5,978,762; 6,487,535 & other U.S. and worldwide patents issued & pending. DTS and the Symbol are registered trademarks, & DTS 2.0+ Digital Out and the DTS logos are trademarks of DTS, Inc. Product includes software. © DTS, Inc. All Rights Reserved.



DivX Certified® to play DivX® video up to HD 1080p, including premium content.

DivX®, DivX Certified® and associated logos are trademarks of DivX, Inc. and are used under license.

ABOUT DIVX VIDEO: DivX® is a digital video format created by DivX, Inc. This is an official DivX Certified® device that plays DivX video. Visit www.divx.com for more information and software tools to convert your files into DivX video.

ABOUT DIVX VIDEO-ON-DEMAND: This DivX Certified® device must be registered in order to play purchased DivX Video-on-Demand (VOD) movies. To obtain your registration code, locate the DivX VOD section in your device setup menu. Go to vod.divx.com for more information on how to complete your registration. Covered by one or more of the following U.S. patents : 7,295,673; 7,460,668; 7,515,710; 7,519,274

Open Source License Notice

In the case of using open source software, Open Source Licenses are available on the product menu. Open Source License Notice is written only English.